

**TSS/8 SYSTEM MANAGER'S GUIDE  
FOR THE PDP-8/I  
TIME-SHARING SYSTEM**

1st Edition, August 1970  
2nd Printing, July 1971

Copyright © 1970, 1971 by Digital Equipment Corporation

The material in this manual is for information purposes and is subject to change without notice.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts:

DEC	PDP
FLIP CHIP	FOCAL
DIGITAL	COMPUTER LAB

## CONTENTS

	Page
PART ONE OPERATING TSS/8	
CHAPTER 1 INTRODUCTION	
1.1	Use of This Manual 1-1
1.2	Planning a TSS/8 Installation 1-1
1.2.1	Size 1-1
1.2.2	Power Requirements 1-2
1.2.3	Teletypes, Dataphones, and Cables 1-2
1.2.4	Environment 1-2
CHAPTER 2 BUILDING A TSS/8 SYSTEM	
2.1	Initializing the System 2-1
2.1.1	Read-In Mode (RIM) Loader 2-2
2.1.2	Binary (BIN) Loader 2-4
2.2	Loading Monitor 2-4
2.3	Refreshing the Disk and Starting the System 2-9
2.4	Building the System Library 2-11
2.4.1	Logging In 2-11
2.4.2	Loading System Programs from Paper Tape with PIP 2-12
2.4.3	Loading System Programs from DECTape with COPY 2-13
2.5	Defining Account Numbers and Passwords 2-14
2.6	General Instructions for Dumping Disks to DECTape 2-17
CHAPTER 3 OPERATING THE TSS/8 SYSTEM	
3.1	Loading the System 3-1
3.2	Starting System 3-2
3.3	Restarting the System 3-2
3.4	System Backup 3-2
3.5	Passwords and Accounting 3-3
3.6	Maintaining the System Library 3-4
3.7	Assignable Devices 3-5
3.8	Controlling Disk Usage 3-5
3.9	Controlling System Users 3-6

## CONTENTS (Cont)

		Page
3.10	Communicating With Users	3-7
3.11	Special IOTs	3-8
CHAPTER 4 MODIFYING TSS/8		
4.1	Modifying System Library Programs	4-1
4.2	Modifying TSS/8 Monitor	4-1
4.3	Controlling Monitor Execution	4-4
PART TWO TSS/8 MONITOR		
CHAPTER 5 INTRODUCTION AND BASIC EXECUTION OF USER PROGRAMS		
5.1	Introduction	5-1
5.2	An Outline of the System	5-1
5.3	Sharing Time	5-3
5.4	Some Definitions	5-8
5.5	Talking to the User Program	5-9
CHAPTER 6 MONITOR: A MORE DETAILED LOOK		
6.1	Monitor as Interrupt Handler	6-1
6.2	I/O Wait Condition	6-4
6.3	Other Parts of Monitor	6-6
6.4	The Monitor Data Base	6-6
CHAPTER 7 SYSTEM STORAGE AND COMMUNICATION		
7.1	Talking to the System	7-1
7.2	Disk Storage and Files	7-4
7.3	Talking to the Disk: The File Phantom	7-6
7.4	Disk Transfers	7-9
7.5	Assignable Devices	7-9
7.6	Error Handling	7-11

## CONTENTS (Cont)

	Page
<b>CHAPTER 8 DETAILS OF MONITOR'S DATA BASE</b>	
8.1            Input/Output Data Base	8-1
8.2            User Program Status	8-4
8.3            Monitor Scheduling Data Base	8-9
8.4            Disk File Data Base	8-10
8.5            File Phantom Data Base	8-11
APPENDIX A   TSS/8 CHARACTER SET	A-1
APPENDIX B   BUILDING A TSS/8 SYSTEM FROM PAPER TAPE	B-1
APPENDIX C   BUILDING A TSS/8 SYSTEM FROM DECtape	C-1
APPENDIX D   TSS/8 HARDWARE CONFIGURATIONS	D-1
APPENDIX E   REQUIRED MODIFICATIONS	E-1

## ILLUSTRATIONS

Figure No.	Title	Art No.	Page
1-1	Typical TSS/8 Installation	08-0540	1-3
2-1	Loading the RIM Loader	08-0541	2-3
2-2	Checking the RIM Loader	08-0542	2-4
2-3	Loading the BIN Loader	08-0543	2-5
2-4	Loading and Starting TSS/8 BUILD or TSS/8 INIT	08-0544	2-5
2-5	Calling and Starting INIT	08-0545	2-17
5-1	16K TSS/8 Configured for 16 Users	08-0548	5-4
8-1	Relationship of Tables, DDBs, and Buffers	08-0549	8-1
8-2	DEVTBL	08-0550	8-2
8-3	Teletype Device Data Block	08-0551	8-3
8-4	Teletype Character Buffer	08-0552	8-4
8-5	Device Data Block - Reader	08-0553	8-5