

 
ADVANCE COPY

This document subject to change
without notice.

IDENTIFICATION

PRODUCT CODE:	MAINDEC-8E-DØIA-D-(D)
PRODUCT NAME:	BASIC JMP-JMS TEST
DATE CREATED:	NOVEMBER 5, 1970
MAINTAINER:	DIAGNOSTICS GROUP
AUTHOR:	BRUCE HANSEN

COPYRIGHT © 1970
DIGITAL EQUIPMENT CORPORATION



1. ABSTRACT

This is a diagnostic program for testing the JMP and JMS instructions of the PDP-8E.

2. REQUIREMENTS

2.1 Equipment

A PDP-8E equipped with Teletype.

2.2 Storage

This program uses most of memory. The Binary Loader must be stored in the last memory page.

2.3 Preliminary Programs

Maindec-8E-D0AA and Maindec-8E-D0BA

3. LOADING PROCEDURE

3.1 Method

The standard Binary Loader is used.

4. STARTING PROCEDURE

4.1 Control Switch Settings (none)

4.2 Starting Address

200

4.3 Restart Addresses

600

704

4.4 Operator Action

- a. Set SR to 200 and press LOAD ADDRESS.
- b. Push clear and then continue. The program will store parts of the RIM and Binary Loaders that will be destroyed, and then JMP to 4200 to begin testing.

5. OPERATING PROCEDURES

5.1 Program Restarts

Since the loaders are already stored, a program restart should begin at 600 not 200.

5.2 Program End

To restore the loaders at the conclusion of the test, start at 704. When the program halts, restoration is completed (PC=736).

6. ERRORS

6.1 Error Halts and Description

See listing, section 10.

6.2 Error Recovery

In most cases it is possible to insert a JMP instruction in the error halt position to return the program to the failing test. This forms a program loop on the failing test and allows the problem to be investigated with an oscilloscope. In cases where a scope mode loop cannot be maintained due to the instability of the JMP or JMS instruction and its failing condition, it will probably be advantageous to simulate this same problem using the Random JMP Test, Maindec-8E-DØHA, or Random JMS Test, Maindec-8E-DØJA.

7. RESTRICTIONS (none)

8. MISCELLANEOUS

8.1 Execution Time

Three hundred and Forty-five program loops per second. A bell is sounded every 10 seconds, which equals 3456 program loops.

9. PROGRAM DESCRIPTION

The program is made up of 82 individual tests for JMP and JMS. An octal counter located at memory location 0136 always holds the number of the present test. For test 1 location, 0136 contains 0000 and for test 82, 0136 contains 0121. Each test performs the following functions:

- a. Check location 0136 for proper test number.
- b. Performs additional checking such as verification of the stored PC (program counter) on a JMS.
- c. Advances test counter.
- d. Sets up for next test.
- e. Jumps or JMSs to the next test. These JMP and JMS instructions are the ones being tested.

If the PC does not arrive at the proper place after performing steps above, it either falls into the background field of HLTS or into another area of the program. If the field of HLTS is encountered, the program halts immediately. If a program field is entered, it is most likely that the program will halt when the test counter check is made (location 136 equals the test count). In a few remote cases it is possible for the test counter to be advanced by one, following the erroneous JMP or JMS and before the halt. It is also possible for the program, on an error condition, to enter the loaders stored in the last memory page. All of these possibilities should be kept in mind when analyzing an error.

Test 0 through 19 are tests for same page jumping using direct addressing. Tests 20 through 45 test the JMP instruction with indirect addressing. In these cases the address that the program jumps to is always the complement of its present address. JMS Tests 1 through 12 are test for the same page using direct addressing. JMS Tests 13 through 35 test JMS in the same manner as JMP is tested in test 20 through 45.

The Teletype bell is sounded every 10 seconds (3456 program cycles).

0063	4740	K4740,	4740
0064	4760	K4760,	4760
0065	5000	K5000,	5000
0066	5020	K5020,	5020
0067	5040	K5040,	5040
0070	5060	K5060,	5060
0071	5100	K5100,	5100
0072	5120	K5120,	5120
0073	5140	K5140,	5140
0074	5160	K5160,	5160
0075	5200	K5200,	5200
0076	5220	K5220,	5220
0102	5240	#102	
0103	5260	K5260,	5240
0104	5300	K5300,	5260
0105	5320	K5320,	5300
0106	5340	K5340,	5320
0107	5360	K5360,	5340
0111	5400	K5400,	5360
0112	5420	K5420,	5400
0113	5440	K5440,	5420
0114	7777	M1,	5440
0115	7776	M2,	-1
0116	7775	M3,	-2
0117	7774	M4,	-3
0120	7773	M5,	-4
0121	7772	M6,	-5
0122	7771	M7,	-6
0123	7767	M10,	-7
0124	7766	M11,	-10
0125	7765	M12,	-11
0126	7764	M13,	-12
0127	7763	M14,	-13
0131	7762	M15,	-14
0132	7761	M16,	-15
0133	7760	M17,	-16
0134	7757	M20,	-17
0135	7756	M21,	-20
0136	0000	M22,	-21
0137	2410	M23,	-22
0140	2440	PNTCNT,	-23
0141	2470	K2410,	0
0142	2520	K2440,	2410
0143	2600	K2470,	2440
0144	2630	K2520,	2470
0145	2660	K2600,	2520
0146	2710	K2630,	2600
0147	2740	K2660,	2630
0150	3000	K2710,	2660
0151	3030	K2740,	2710
		K3000,	2740
		K3030,	3000
			3030

/BASIC JMP-JMS TEST

0152	3060	K3060,	3060
0153	3110	K3110,	3110
0154	3140	K3140,	3140
0155	3200	K3200,	3200

0156	3230	K3230,	3230
0157	3260	K3260,	3260
0160	3310	K3310,	3310
0161	3340	K3340,	3340
0162	3400	K3400,	3400
0163	3430	K3430,	3430
0164	3460	K3460,	3460
0165	3510	K3510,	3510
0166	3540	K3540,	3540

0170	0170	*170	
0000	0000	DO,	
0171	1175		TAD K7402
0172	3410		DCA I 10
0173	1010		TAD 10
0174	9970		JMP I DO
0175	7402	K7402,	7402

0200	0200	*200	
0601	0601	SAVER,	JMP I SAVER
0600	0600	SAVE,	SAVE

/STORE LOADER INSTRUCTIONS
/THAT WILL BE DESTROYED

0600	0600	*600	
7200	7200	SAVE,	CLA I K7775
1453	1453		TAD I K7775
3343	3343		DCA STOR
1452	1452		TAD I K7773
3344	3344		DCA STOR+1
1736	1736		TAD I K74
3345	3345		DCA STOR+2
1451	1451		TAD I K7767
3346	3346		DCA STOR+3
1737	1737		TAD I K76
3347	3347		DCA STOR+4
1450	1450		TAD I K7757
3350	3350		DCA STOR+5
1740	1740		TAD I K60
3351	3351		DCA STOR+6
1447	1447		TAD I K7737
3352	3352		DCA STOR+7
1741	1741		TAD I K740
3353	3353		DCA STOR+10

0623	1446	TAD I K7677
0624	3354	DCA STOR+11
0625	1742	TAD I K00
0626	3355	DCA STOR+12
0627	1455	TAD I K7777
0630	3356	DCA STOR+13
0631	7300	CLA CLL
0632	1264	TAD K175
0633	3010	DCA 10
0634	4170	JMS DO
0635	1265	TAD M577
0636	7640	SEA CLA
0637	5234	JMP -3
0640	1266	TAD K756
0641	3010	DCA 10
0642	4170	JMS DO
0643	1267	TAD M1777
0644	7640	SEA CLA
0645	5242	JMP -3
0646	1270	TAD K3572
0647	3010	DCA 10
0650	4170	JMS DO
0651	1271	TAD M4177
0652	7640	SEA CLA
0653	5250	JMP -3
0654	1272	TAD K5451
0655	3010	DCA 10
0656	4170	JMS DO
0657	1273	TAD M7600
0660	7640	SEA CLA
0661	5256	JMP -3
0662	5300	JMP RESTAR
0663	4200	BEGIN
0664	0175	K175,
0665	7201	M577, -577
0666	0756	K756, 756
0667	0001	M1777, -1777
0670	3572	K3572, 3572
0671	5601	M4177, -4177
0672	5451	K5451, 5451
0673	0200	M7600, -7600

/RESTORE LOADER INSTRUCTIONS

0700	*700	RESTAR,
0701	1303	TAD RENEW
0702	3200	DCA SAVE
0703	5303	JMP RENEW
0704	5663	JMP I HALT+7
0705	7200	REFILL, CLA
0706	1343	TAD STOR
0707	3453	DCA I K7775
07	1344	TAD STOR+1
07	3452	DCA I K7775

```

0711 1345 TAD STOR+2
0712 1346 DCA I K74
0713 1346 TAD STOR+3
0714 1347 DCA I K7767
0715 1347 TAD STOR+4
0716 1347 DCA I K70
0717 1350 TAD STOR+5
0720 1350 DCA I K7757
0721 1351 TAD STOR+6
0722 1340 DCA I K60
0723 1352 TAD STOR+7
0724 1347 DCA I K7737
0725 1353 TAD STOR+10
0726 1341 DCA I K740
0727 1354 TAD STOR+11
0730 1346 DCA I K7677
0731 1355 TAD STOR+12
0732 1342 DCA I K00
0733 1356 TAD STOR+13
0734 1355 DCA I K7777
0735 1402 HLT

```

/CONSTANTS

```

0736 7774 K74,
0737 7770 K70,
0740 7760 K60,
0741 7740 K740,
0742 7700 K00,
0743 0000 STOR,
0744 0000
0745 0000
0746 0000
0747 1742 -6036
0750 0000
0751 0000
0752 0000
0753 0000
0754 0000
0755 0000
0756 0000

```

```

/STOR LOC 7775
/+1 STORE LOC 7773
/+2 STORE LOC 7774
/+3 STORE LOC 7767
/+4 STORE LOC 7750
/+5 STORE LOC 7757
/+6 STORE LOC 7760
/+7 STORE LOC 7737
/+10 STORE LOC 7740
/+11 STORE LOC 7677
/+12 STORE LOC 7700
/+13 STORE LOC 7777

```

```

4200 4200 =4200
4201 3136 BEGIN,

```

```

CLA PNTCNT
DCA PNTCNT

```

```

4202 5203 /JUMP TEST 0 COUNTER=0
4203 1136 JMP +1
4204 7440 TAD PNTCNT
4205 7402 SZA
4206 1136 HLT
TAD PNTCNT
/CHECK COUNTER WRONG
/JMP COUNTER WRONG

```

4207	7001	IAC	/ADVANCE COUNTER
4210	3136	DCA PNTCNT	
/JUMP TEST 1 COUNTER=1			
4211	5213	JMP .+2	/JMP FAILED
4212	7402	HLT	
4213	1136	TAD PNTCNT	
4214	1113	TAD M1	
4215	7440	SEA	/CHECK COUNTER
4216	7402	HLT	/JMP COUNTER WRONG
4217	1136	TAD PNTCNT	
4220	7001	IAC	/ADVANCE COUNTER
4221	3136	DCA PNTCNT	
/JUMP TEST 2 COUNTER=2			
4222	5225	JMP .+3	/JMP FAILED
4223	7402	HLT	
4224	7402	HLT	
4225	1136	TAD PNTCNT	
4226	1114	TAD M2	
4227	7440	SEA	/CHECK COUNTER
4230	7402	HLT	/JMP COUNTER WRONG
4231	1136	TAD PNTCNT	
4232	7001	IAC	
4233	3136	DCA PNTCNT	
/JUMP TEST 3 COUNTER=3			
4234	5240	JMP .+4	/JMP FAILED
4235	7402	HLT	/
4236	7402	HLT	/
4237	7402	HLT	
4240	1136	TAD PNTCNT	
4241	1115	TAD M3	
4242	7440	SEA	/CHECK COUNTER
4243	7402	HLT	/JMP COUNTER WRONG
4244	1136	TAD PNTCNT	
4245	7001	IAC	/ADVANCE COUNTER
4246	3136	DCA PNTCNT	
/JUMP TEST 4 COUNTER=4			
4247	5254	JMP .+5	/JMP FAILED
4250	7402	HLT	/
4251	7402	HLT	/
4252	7402	HLT	/
4253	7402	HLT	
4254	1136	TAD PNTCNT	
4255	1116	TAD M4	
4256	7440	SEA	/CHECK COUNTER
4257	7402	HLT	/JMP COUNTER WRONG
4260	1136	TAD PNTCNT	
4261	7001	IAC	/ADVANCE COUNTER
4262	3136	DCA PNTCNT	
/JUMP TEST 5 COUNTER=5			

```

4263 9271 JMP .+6
4264 7402 HLT
4265 7402 HLT
4266 7402 HLT
4267 7402 HLT
4270 7402 HLT
4271 1136 TAD PNTCNT
4272 1117 TAD M5
4273 7440 SEA
4274 7402 HLT
4275 1136 TAD PNTCNT
4276 7001 IAC
4277 3136 DCA PNTCNT

/JMP FAILED
/
/
/
/
/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

```

```

/JUMP TEST 6 COUNTER=6
/JMP .+7
4300 5307 HLT
4301 7402 HLT
4302 7402 HLT
4303 7402 HLT
4304 7402 HLT
4305 7402 HLT
4306 7402 HLT
4307 1136 TAD PNTCNT
4310 1120 TAD M6
4311 7440 SEA
4312 7402 HLT
4313 1136 TAD PNTCNT
4314 7001 IAC
4315 3136 DCA PNTCNT

/JMP FAILED
/
/
/
/
/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

```

```

/JUMP TEST 7 COUNTER=7
/JMP .+10
4316 5326 HLT
4317 7402 HLT
4320 7402 HLT
4321 7402 HLT
4322 7402 HLT
4323 7402 HLT
4324 7402 HLT
4325 7402 HLT
4326 1136 TAD PNTCNT
4327 1121 TAD M7
4330 7440 SEA
4331 7402 HLT
4332 1136 TAD PNTCNT
4333 7001 IAC
4334 3136 DCA PNTCNT

/JMP FAILED
/
/
/
/
/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

```

```

/JUMP TEST 8 COUNTER=10
/JMP .+11
4335 5346 HLT
4336 7402 HLT
4337 7402 HLT
4340 7402 HLT
4341 7402 HLT
4342 7402 HLT

```

```

4343 7402 /
4344 7402 /
4345 7402 /
4346 1136 /CHECK COUNTER
4347 1122 /JMP COUNTER WRONG
4350 7440 /ADVANCE COUNTER
4351 7402
4352 1136
4353 7001
4354 3136

```

/JUMP TEST 9 COUNTER=11

```

4355 9367 /JMP .+12
4356 7402 /JMP FAILED
4357 7402 /
4360 7402 /
4361 7402 /
4362 7402 /
4363 7402 /
4364 7402 /
4365 7402 /
4366 7402 /
4367 1136 /CHECK COUNTER
4370 1123 /JMP COUNTER WRONG
4371 7440 /ADVANCE COUNTER
4372 7402
4373 1136
4374 7001
4375 3136
4376 7000
4377 7000

```

*4400 /JUMP TEST 10 COUNTER=12

```

4400 4400 /
4401 9201 /JMP .+1
4402 1136 /TAD PNTCNT
4403 1124 /TAD M12
4404 7402 /SEA
4405 1136 /HLT
4406 7001 /TAD PNTCNT
4407 3136 /IAC
          /DCA PNTCNT
          /CHECK COUNTER
          /JMP COUNTER WRONG
          /ADVANCE COUNTER

```

/JUMP TEST 11 COUNTER=13

```

6410 9212 /JMP .+2
6411 7402 /JMP FAILED
6412 1136 /TAD PNTCNT
6413 1125 /TAD M13
6414 7440 /SEA
6415 7402 /HLT
6416 1136 /CHECK COUNTER
6417 7001 /JMP COUNTER WRONG
6418 3136 /ADVANCE COUNTER

```

```

4421 5224 /JUMP TEST 12 COUNTER=14
4422 7402 JMP .+3
4423 7402 HLT /JMP FAILED
4424 1136 HLT /
4425 1126 TAD PNTCNT
4426 7440 TAD M14
4427 7402 SEA /CHECK COUNTER
4430 1136 HLT /JMP COUNTER WRONG
4431 7001 TAD PNTCNT /ADVANCE COUNTER
4432 3136 IAC PNTCNT
      DCA PNTCNT

```

```

4433 5237 /JUMP TEST 13 COUNTER=15
4434 7402 JMP .+4
4435 7402 HLT /JMP FAILED
4436 7402 HLT /
4437 1136 TAD PNTCNT
4440 1127 TAD M15
4441 7440 SEA /CHECK COUNTER
4442 7402 HLT /JMP COUNTER WRONG
4443 1136 TAD PNTCNT /ADVANCE COUNTER
4444 7001 IAC
4445 3136 DCA PNTCNT

```

```

4446 5253 /JUMP TEST 14 COUNTER=16
4447 7402 JMP .+5
4448 7402 HLT /JMP FAILED
4449 7402 HLT /
4451 7402 HLT /
4452 7402 HLT /
4453 1136 TAD PNTCNT
4454 1130 TAD M16
4455 7440 SEA /CHECK COUNTER
4456 7402 HLT /JMP COUNTER WRONG
4457 1136 TAD PNTCNT /ADVANCE COUNTER
4460 7001 IAC
4461 3136 DCA PNTCNT

```

```

4462 5270 /JUMP TEST 15 COUNTER=17
4463 7402 JMP .+6
4464 7402 HLT /JMP FAILED
4465 7402 HLT /
4466 7402 HLT /
4467 7402 HLT /
4470 1136 TAD PNTCNT
4471 1131 TAD M17
4472 7440 SEA /CHECK COUNTER
4473 7402 HLT /JMP COUNTER WRONG
4474 1136 TAD PNTCNT /ADVANCE COUNTER
4475 7001 IAC
4476 3136 DCA PNTCNT

```

```

/JUMP TEST 16  COUNTER =20
JMP .+7
HLT /JMP FAILED
HLT /
HLT /
HLT /
HLT /
HLT /
TAD PNTCNT
TAD M20
SEA /CHECK COUNTER
HLT /JMP COUNTER WRONG
TAD PNTCNT
IAC /ADVANCE COUNTER
DCA PNTCNT

```

```

/JUMP TEST 17  COUNTER=21
JMP .+10 /JMP FAILED
HLT /

```

```

TAD PNTCNT
TAD M21 /CHECK COUNTER
SEA /JMP COUNTER WRONG
HLT /ADVANCE COUNTER
IAC /ADVANCE COUNTER
DCA PNTCNT

```

```

/JUMP TEST 18  COUNTER=22
JMP .+11
HLT /JMP FAILED
HLT /
HLT /
HLT /
HLT /
HLT /
HLT /
TAD PNTCNT
TAD M22
SEA /CHECK COUNTER
HLT /JMP COUNTER WRONG
TAD PNTCNT
IAC /ADVANCE COUNTER
DCA PNTCNT

```

```

/JMP TEST 19  COUNTER=23

```

```

4554 9366 JMP .+12
4555 7402 HLT
4556 7402 HLT
4557 7402 HLT
4560 7402 HLT
4561 7402 HLT
4562 7402 HLT
4563 7402 HLT
4564 7402 HLT
4565 7402 HLT
4566 1136 TAD PNTCNT
4567 1136 TAD M25
4570 7440 SEA
4571 7402 HLT
4572 1136 TAD PNTCNT
4573 7001 IAC
4574 3136 DCA PNTCNT
4575 7000 NOP
4576 7000 NOP
4577 7000 NOP

```

/JMP FAILED

/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

/JMP TEST 20 COUNTER=24

```

4600 1200 /JMP TEST 20 COUNTER=24
4601 3455 TAD PK1
4602 1206 DCA I K7777
4603 3422 TAD PK2
4604 5455 DCA I K0
4605 5422 JMP I K7777
4606 5456 JMP I K0

```

PK1,
PK2,

*4620

```

4620 4620 TAD PNTCNT
4621 1136 TAD M24
4622 7440 SEA
4623 7402 HLT
4624 1136 TAD PNTCNT
4625 7001 IAC
4626 3136 DCA PNTCNT

```

/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

/JMP TEST 21 COUNTER=25

```

4627 1234 /JMP TEST 21 COUNTER=25
4630 3454 TAD PK3
4631 1235 DCA I K7776
4632 3423 TAD PK4
4633 5454 DCA I K1
4634 5423 JMP I K7776
4635 5457 JMP I K1
4636 7754 M24, -24

```

PK3,
PK4,
M24,

*4640

```

4640 4640 TAD PNTCNT
4641 1136 TAD M25
4642 7440 SEA
4643 7402 HLT

```

/CHECK COUNTER
/JMP COUNTER WRONG

4644 1136 TAD PNTCNT /ADVANCE COUNTER
 4645 7001 IAC /ADVANCE COUNTER
 4646 3136 DCA PNTCNT

4647 1254 /JMP TEST 22 COUNTER=26
 4650 3453 TAD PK5
 4651 1255 DCA I K7775
 4652 3424 TAD PK6
 4653 5453 DCA I K2
 4654 5424 JMP I K7775
 4655 5660 JMP I K2
 4656 7753 JMP I 4660
 -25

4660 4660 *4660
 4661 1136 TAD PNTCNT
 4662 1276 TAD M26
 4663 7400 SEA /CHECK COUNTER WRONG
 4664 1136 HLT /JMP COUNTER WRONG
 4665 7001 TAD PNTCNT /ADVANCE COUNTER
 4666 3136 IAC
 DCA PNTCNT

4667 1274 /JMP TEST 23 COUNTER=27
 4670 3452 TAD PK7
 4671 1275 DCA I K7773
 4672 3425 TAD PK8
 4673 5452 DCA I K4
 4674 5425 JMP I K7773
 4675 5461 JMP I K4
 4676 7752 JMP I K4700
 -26

4700 4700 *4700
 4701 1136 TAD PNTCNT
 4702 1316 TAD M27
 4703 7400 SEA /CHECK COUNTER WRONG
 4704 1136 HLT /JMP COUNTER WRONG
 4705 7001 TAD PNTCNT /ADVANCE COUNTER
 4706 3136 IAC
 DCA PNTCNT

4707 1314 /JMP TEST 24 COUNTER=30
 4710 3451 TAD PK9
 4711 1315 DCA I K7767
 4712 3426 TAD PK1E
 4713 5451 DCA I K10
 4714 5426 JMP I K7767
 4715 5462 JMP I K10
 4716 7751 JMP I K4720
 -27

4720 4720 *4720
 4721 1136 TAD PNTCNT

11-NOV

PA.10

/BASIC JMP-JMS TEST

4721 1336
 4722 7440
 4723 7602
 4724 1136
 4725 7001
 4726 3136

TAD M30
 SEA
 HLT
 TAD PNTCNT
 IAC
 DCA PNTCNT
 /JMP TEST 25 COUNTER=31
 TAD PK11
 DCA I K7757
 TAD PK12
 DCA I K20
 JMP I K7757
 JMP I K20
 JMP I K4740
 *30

PK11,
 PK12,
 M30,
 *4740
 4740
 1136
 4741 1356
 4742 7440
 4743 7402
 4744 1136
 4745 7001
 4746 3136

TAD PNTCNT
 TAD M31
 SEA
 HLT
 TAD PNTCNT
 IAC
 DCA PNTCNT
 /CHECK COUNTER
 /JMP COUNTER WRONG
 /ADVANCE COUNTER

*4760
 4760
 1136
 4761 1376
 4762 7440
 4763 7402
 4764 1136
 4765 7001
 4766 3136

TAD PNTCNT
 TAD M32
 SEA
 HLT
 TAD PNTCNT
 IAC
 DCA PNTCNT
 /JMP TEST 26 COUNTER=32
 TAD PK13
 DCA I K7737
 TAD PK14
 DCA I K40
 JMP I K7737
 JMP I K40
 JMP I K4760
 *31

PK13,
 PK14,
 M31,
 *4760
 4760
 1136
 4761 1376
 4762 7440
 4763 7402
 4764 1136
 4765 7001
 4766 3136

TAD PNTCNT
 TAD PK15
 DCA I K7677
 TAD PK16
 DCA I K102
 JMP I K7677
 JMP I K102
 JMP I K6000
 *32

PK15,
 PK16,
 M32,
 4767 1374
 4768 3446
 4769 1375
 4770 3431
 4771 3446
 4772 5431
 4773 5465
 4774 7746
 4775 7746

/CHECK COUNTER
 /JMP COUNTER WRONG
 /ADVANCE COUNTER
 /JMP TEST 27 COUNTER=33
 TAD PK15
 DCA I K7677
 TAD PK16
 DCA I K102
 JMP I K7677
 JMP I K102
 JMP I K6000
 *32

5053 5443
5054 5434
5055 5470
5056 7743

JMP I K6777
JMP I K1000
JMP I K5060
-35

5060
5060 1136
5061 1276
5062 7440
5063 7402
5064 1136
5065 7001
5066 3136

*5060
TAD PNTCNT
TAD M36
SEA
HLT
TAD PNTCNT
IAC
DCA PNTCNT

/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

5067 1274
5070 3442
5071 1275
5072 3435
5073 5442
5074 5435
5075 5471
5076 7742

/JMP TEST 31 COUNTER=37
TAD PK23
DCA I K5777
TAD PK24
DCA I K2000
JMP I K5777
JMP I K2000
JMP I K5100
-36

5100
5100 1136
5101 1316
5102 7440
5103 7402
5104 1136
5105 7001
5106 3136

*5100
TAD PNTCNT
TAD M37
SEA
HLT
TAD PNTCNT
IAC
DCA PNTCNT

/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

5107 1314
5110 3437
5111 1315
5112 3436
5113 5437
5114 5436
5115 5472
5116 7741

/JMP TEST 32 COUNTER=40
TAD PK25
DCA I K3777
TAD PK26
DCA I K4000
JMP I K3777
JMP I K4000
PK25,
PK26,
M37,
-37

5120
5120 1136
5121 1336
5122 7440
5123 7402
5124 1136
5125 7001
5126 3136

*5120
TAD PNTCNT
TAD M40
SEA
HLT
TAD PNTCNT
IAC
DCA PNTCNT

/CHECK COUNTER
/JMP COUNTER WRONG
/ADVANCE COUNTER

/JMP TEST 33 COUNTER=41

5127 1334
 5130 3422
 5131 1335
 5132 3455
 5133 5422
 5134 5455
 5135 5473
 5136 7740

TAD PK27
 DCA I K0
 TAD PK28
 DCA I K7777
 JMP I K0
 JMP I K7777
 JMP I K5140
 -40

*5140

5140 TAD PNTCNT
 5136 TAD M41
 5141 SZA
 5142 HLT
 5143 TAD PNTCNT
 5144 IAC
 5145 DCA PNTCNT
 5146

/CHECK COUNTER
 /JMP COUNTER WRONG
 /ADVANCE COUNTER

/JMP TEST 34 COUNTER=42

5147 1354
 5190 3423
 5151 1355
 5152 3454
 5153 5423
 5154 5454
 5155 5474
 5156 7737

TAD PK29
 DCA I K1
 TAD PK30
 DCA I K7776
 JMP I K1
 JMP I K7776
 JMP I K5160
 -41

*5160

5160 TAD PNTCNT
 5136 TAD M42
 5161 SZA
 5162 HLT
 5163 TAD PNTCNT
 5164 IAC
 5165 DCA PNTCNT
 5166

/CHECK COUNTER
 /JMP COUNTER WRONG
 /ADVANCE COUNTER

/JMP TEST 35 COUNTER=43

5167 1374
 5170 3424
 5171 1375
 5172 3453
 5173 5424
 5174 5453
 5175 5475
 5176 7736

TAD PK31
 DCA I K2
 TAD PK32
 DCA I K7775
 JMP I K2
 JMP I K7775
 JMP I K5200
 -42

*5200

5200 TAD PNTCNT
 5201 TAD M43
 5202 SZA
 5203 HLT
 5204 TAD PNTCNT

/CHECK COUNTER
 /JMP COUNTER WRONG

/ADVANCE COUNTER

IAC PNTCNT
DCA PNTCNT

/JMP TEST 36 COUNTER=44

TAD PK33
DCA I K4
TAD PK34
DCA I K7773
JMP I K4
JMP I K7773
JMP I K5220
-43

PK33,
PK34,
M43,

*5220

TAD PNTCNT
TAD M44
SZA
HLT
TAD PNTCNT
IAC
DCA PNTCNT

/CHECK COUNTER WRONG
/JMP COUNTER WRONG
/ADVANCE COUNTER

/JMP TEST 37 COUNTER=45

TAD PK35
DCA I K10
TAD PK36
DCA I K7767
JMP I K10
JMP I K7767
JMP : K5240
-44

PK35,
PK36,
M44,

*5240

TAD PNTCNT
TAD M45
SZA
HLT
TAD PNTCNT
IAC
DCA PNTCNT

/CHECK COUNTER WRONG
/JMP COUNTER WRONG
/ADVANCE COUNTER

/JMP TEST 3 COUNTER=46

TAD PK37
DCA I K20
TAD PK38
DCA I K7757
JMP I K20
JMP I K7757
JMP I K5260
-45

PK37,
PK38,
M45,

*5260

TAD PNTCNT
TAD M46

5205 7001
5206 3136

5207 1214
5210 3425
5211 1215
5212 3452
5213 5425
5214 5452
5215 5476
5216 7735

5220
5221 1136
5222 1236
5223 7440
5224 7402
5224 1136
5225 7001
5226 3136

5227 1234
5230 3426
5231 1235
5232 3491
5233 5426
5234 5451
5235 5502
5236 7734

5240
5241 1136
5242 1256
5243 7440
5244 7402
5245 1136
5246 7001
5247 3136

5247 1254
5250 3427
5251 1255
5252 3450
5253 5427
5254 5450
5255 5503
5256 7733

5260
5261 1136
5262 1276

5262 7440 SZA /CHECK COUNTER
 5263 7402 HLT /JMP COUNTER WRONG
 5264 1136 TAD PNTCNT
 5265 7001 IAC /ADVANCE COUNTER
 5266 3136 DCA PNTCNT

/JMP TEST 39 COUNTER=47

5267 1274 TAD PK39
 5270 3430 DCA I K40
 5271 1275 TAD PK40
 5272 3447 DCA I K7737
 5273 5430 JMP I K40
 5274 5447 JMP I K7737
 5275 5504 JMP I K5300
 5276 7732 M46, -46

*5300

5300 5300 TAD PNTCNT
 5301 1136 TAD M47
 5302 7440 SZA /CHECK COUNTER
 5303 7402 HLT /JMP COUNTER WRONG
 5304 1136 TAD PNTCNT
 5305 7001 IAC /ADVANCE COUNTER
 5306 3136 DCA PNTCNT

/JMP TEST 40 COUNTER=50

5307 1314 TAD PK41
 5310 3431 DCA I K100
 5311 1315 TAD PK42
 5312 3446 DCA I K7677
 5313 5431 JMP I K100
 5314 5446 JMP I K7677
 5315 5505 JMP I K5320
 5316 7731 M47, -47

*5320

5320 5320 TAD PNTCNT
 5321 1136 TAD M50
 5322 7440 SZA /CHECK COUNTER
 5323 7402 HLT /JMP COUNTER WRONG
 5324 1136 TAD PNTCNT
 5325 7001 IAC /ADVANCE COUNTER
 5326 3136 DCA PNTCNT

/JMP TEST 41 COUNTER=51

5327 1334 TAD PK43
 5330 3432 DCA I K200
 5331 1335 TAD PK44
 5332 3445 DCA I K7577
 5333 5432 JMP I K200
 5334 5445 JMP I K7577
 5335 5506 JMP I K5340
 5336 7730 M50, -50

5340 *5340
 5340 1136 TAD PNTCNT
 5341 1356 TAD M51
 5342 7440 SZA /CHECK COUNTER
 5343 7402 HLT /JMP COUNTER WRONG
 5344 1136 TAD PNTCNT /ADVANCE COUNTER
 5345 7001 IAC
 5346 3136 DCA PNTCNT

5347 1394 /JMP TEST 42 COUNTER=52
 5350 3433 TAD PK45
 5351 1395 DCA I K400
 5352 3444 TAD PK46
 5353 5433 DCA I K7377
 5354 5444 JMP I K400
 5355 5507 JMP I K7377
 5356 7727 JMP I K5360
 -51

5360 *5360
 5360 1136 TAD PNTCNT
 5361 1376 TAD M52
 5362 7440 SZA /CHECK COUNTER
 5363 7402 HLT /JMP COUNTER WRONG
 5364 1136 TAD PNTCNT /ADVANCE COUNTER
 5365 7001 IAC
 5366 3136 DCA PNTCNT

5367 1374 /JMP TEST 43 COUNTER=53
 5370 3434 TAD PK47
 5371 1375 DCA I K1000
 5372 3443 TAD PK48
 5373 5434 DCA I K6777
 5374 5443 JMP I K1000
 5375 5510 JMP I K6777
 5376 7726 JMP I K5400
 -52

5400 *5400
 5400 1136 TAD PNTCNT
 5401 1216 TAD M53
 5402 7440 SZA /CHECK COUNTER
 5403 7402 HLT /JMP COUNTER WRONG
 5404 1136 TAD PNTCNT /ADVANCE COUNTER
 5405 7001 IAC
 5406 3136 DCA PNTCNT

5407 1214 /JMP TEST 44 COUNTER=54
 5410 3435 TAD PK49
 5411 1215 DCA I K2000
 5412 3442 TAD PK50
 5413 5435 DCA I K5777
 5414 5442 JMP I K2000
 PK49, JMP I K5777

5415	5511	PK50,	JMP I K5420	
5416	7725	M53,	-53	
5420	5420	*5420		
5420	1136		TAD PNTCNT	
5421	1236		TAD M54	
5422	7440		SZA /CHECK COUNTER	
5423	7402		HLT /JMP COUNTER WRONG	
5424	1136		TAD PNTCNT	
5425	7001		IAC /ADVANCE COUNTER	
5426	3136		DCA PNTCNT	
5427	1234		/JMP TEST 45 COUNTER=55	
5430	3436		TAD PK51	
5431	1235		DCA I K4000	
5432	3437		TAD PK52	
5433	5436		DCA I K3777	
5434	5437		JMP I K4000	
5435	5512	PK51,	JMP I K3777	
5436	7724	PK52,	JMP I K5440	
		M54,	-54	
5440	5440	*5440		
5440	1136		TAD PNTCNT	
5441	1250		TAD M55	
5442	7440		SZA /CHECK COUNTER WRONG	
5443	7402		HLT /JMP COUNTER WRONG	
5444	1136		TAD PNTCNT	
5445	7001		IAC /ADVANCE COUNTER	
5446	3136		DCA PNTCNT	
5447	5651		/JMS TEST 1 COUNTER=56	
5450	7723	M55,	JMP I AFRM	
5451	2002	AFRM,	-55	
2002	2002	*2002		
2003	4203	FRM,	JMS TO	
2004	1136	TO,	JMP .	
2005	1222		TAD PNTCNT	
2006	7440		TAD M56	
2007	7402		SZA /CHECK COUNTER WRONG	
2010	1224		HLT /JMP COUNTER WRONG	
2011	7041		TAD AFM	
2012	1203		CIA	
2013	7440		TAD TO	
2014	7402		SZA /CHECK STORED ADDRESS	
2015	3203		HLT /JMS FAILED	
2016	1136		DCA TO /CLEAR STORED PC	
2017	7001		TAD PNTCNT	
2020	3136		IAC	
2021	7410		DCA PNTCNT	
7722	7722	M56,	SKP	
			-56	

2023	7410	SKP			
2024	2003	FRM+1			
2025	4227		/JMS TEST 2 COUNTER=57		
2026	7402	FRM1,	JMS T01		
2027	5227	T01,	HLT		
2030	1136		JMP		
2031	1246		TAD PNTCNT		
2032	7440		TAD M57		
2033	7402		SEA	/CHECK COUNTER WRONG	
2034	1250		HLT	/JMP COUNTER WRONG	
2035	7041		TAD AFRM1		
2036	1227		CIA		
2037	7440		TAD T01		
2040	7402		SEA	/CHECK STORED ADDRESS	
2041	3227		HLT	/JMS FAILED	
2042	1136		DCA T01	/CLEAR STORED PC	
2043	7001		TAD PNTCNT		
2044	3136		IAC		
2045	7410		DCA PNTCNT		
2046	7721	M57,			
2047	7410	SKP			
2050	2026	AFRM1,	FRM1		
2051	4254		/JMS TEST 3 COUNTER=60		
2052	7402	FRM2,	JMS T02		
2053	7402		HLT		
2054	9254	T02,	HLT		
2055	1136		JMP		
2056	1275		TAD PNTCNT		
2057	7440		TAD M60		
2060	7402		SEA	/CHECK COUNTER	
2061	1273		HLT	/JMP COUNTER WRONG	
2062	7041		TAD AFRM2		
2063	1254		CIA		
2064	7440		TAD T02		
2065	7402		SEA	/CHECK STORED ADDRESS	
2066	3254		HLT	/JMS FAILED	
2067	1136		DCA T02	/CLEAR STORED PC	
2070	7001		TAD PNTCNT		
2071	3136		IAC		
2072	7410		DCA PNTCNT		
2073	2052	AFRM2,	SKP		
2074	7410		FRM2		
2075	7720	M60,	SKP		
			-60		
2076	4302		/JMS TEST 4 COUNTER=61		
2077	7402	FRM3,	JMS T03		
2100	7402		HLT		
2101	7402		HLT		
			HLT		

2102	5302	JMP	
2103	1136	TAD	PNTCNT
2104	1323	TAD	M61
2105	7440	SEA	
2106	7402	HLT	
2107	1321	TAD	AFRMS
2110	7041	CIA	
2111	1302	TAD	T03
2112	7443	SEA	
2113	7402	HLT	
2114	3302	DCA	T03
2115	1136	TAD	PNTCNT
2116	7001	IAC	
2117	3136	DCA	PNTCNT
2120	7410	SKP	
2121	2077	FRMS	
2122	7410	SKP	
2123	7717	-61	

/CHECK STORED ADDRESS
/JMS FAILED
/CLEAR STORED PC

/CHECK COUNTER WRONG

2124	4330	/JMS TEST 5 COUNTER=62	
2125	7402	JMS	T04
2126	7402	HLT	
2127	7402	HLT	
2130	3330	JMP	PNTCNT
2131	1136	TAD	M62
2132	1351	SEA	
2133	7440	HLT	
2134	7402	TAD	AFRMS
2135	1347	CIA	
2136	7041	TAD	T04
2137	1330	SEA	
2140	7440	HLT	
2141	7402	HLT	
2142	3330	DCA	T04
2143	1136	TAD	PNTCNT
2144	7001	IAC	
2145	3136	DCA	PNTCNT
2146	7410	SKP	
2147	2125	FRMS	
2150	7410	SKP	
2151	7716	-62	

/CHECK STORED ADDRESS
/JMS FAILED
/CLEAR STORED PC

/CHECK COUNTER WRONG

2152	4356	/JMS TEST 6 COUNTER=63	
2153	7402	JMS	T05
2154	7402	HLT	
2155	7402	HLT	
2156	3356	JMP	PNTCNT
2157	1136	TAD	M63
2160	1377	TAD	M63
2161	7440	SEA	

/CHECK COUNTER

2162	7402	HLT	
2163	1375	TAD	AFRMS
2164	7041	CIA	
2165	1356	TAD	T05
2166	7440	SZA	
2167	7402	HLT	
2170	3356	DCA	T05
2171	1136	TAD	PNTCNT
2172	7001	IAC	
2173	3136	DCA	PNTCNT
2174	7410	SKP	
2175	2153	AFRMS,	
2176	7410	SKP	
2177	7715	M63,	-63

/JMP COUNTER WRONG

/CHECK STORED ADDRESS
/JMS FAILED
/CLEAR STORED PC

PAUSE

/TAPE # 2
*2200

2200	2200	/JMS TEST 7 COUNTER=64	
2201	7000	NOP	
2202	4202	JMS	T06
2203	5202	JMP	.
2204	1136	TAD	PNTCNT
2205	1221	TAD	M64
2206	7440	SZA	
2207	7402	HLT	
2210	1202	TAD	T06
2211	7041	CIA	
2212	1223	TAD	AT06
2213	7440	SZA	
2214	7402	HLT	
2215	3202	DCA	T06
2216	1136	TAD	PNTCNT
2217	7001	IAC	
2220	3136	DCA	PNTCNT
2221	7410	SKP	
2222	7714	-64	
2223	7410	SKP	
	2202	AT06,	

/CHECK COUNTER WRONG
/JMP COUNTER WRONG

/CHECK STORED ADDRESS
/JMS FAILED
/CLEAR STORED PC

PAUSE

/TAPE # 2
*2200

2224	4226	/JMS TEST 8 COUNTER=65	
2225	7402	JMS	T07
2226	5226	HLT	
2227	1136	JMP	.
2230	1245	TAD	PNTCNT
2231	7440	TAD	M65
2232	7402	SZA	
2233	1247	HLT	
2234	7041	TAD	AFRMS
2235	1226	CIA	
		TAD	T07

/CHECK COUNTER WRONG
/JMP COUNTER WRONG

2236 7440 /BASIC JMP-JMS TEST
 2237 7402 SEA /CHECK STORED ADDRESS
 2240 3226 HLT /JMS FAILED
 2241 1136 DCA T07 /CLEAR STORED PC
 2242 7001 TAD PNTCNT
 2243 3136 IAC
 2244 7410 DCA PNTCNT
 2245 7713 SKP
 2246 7410 M65, -65
 2247 2225 AFRM7, FRM7

2250 4253 /JMS TEST 9 COUNTER=66
 2251 7402 JMS T08
 2252 7402 HLT FRM8,
 2253 5253 HLT T08,
 2254 1136 JMP TAD PNTCNT
 2255 1274 TAD M66
 2256 7440 SEA /CHECK COUNTER
 2257 7402 HLT /JMP COUNTER WRONG
 2260 1253 TAD T08
 2261 7041 CIA
 2262 1272 TAD AFRM8
 2263 7440 SEA /CHECK STORED ADDRESS
 2264 7402 HLT /JMS FAILED
 2265 3253 DCA T08 /CLEAR STORED PC
 2266 1136 TAD PNTCNT
 2267 7001 IAC
 2270 3136 DCA PNTCNT
 2271 7410 SKP
 2272 2251 AFRM8,
 2273 7410 SKP
 2274 7712 M66, -66

2275 4301 /JMS TEST 10 COUNTER=67
 2276 7402 JMS T09
 2277 7402 HLT FRM9,
 2300 7402 HLT T09,
 2301 5301 JMP TAD PNTCNT
 2302 1136 TAD M67
 2303 1322 SEA /CHECK COUNTER
 2304 7440 HLT /JMP COUNTER WRONG
 2305 7402 TAD T09
 2306 1301 CIA
 2307 7041 TAD AFRM9
 2310 1320 SEA /CHECK STORED ADDRESS
 2311 7440 HLT /JMS FAILED
 2312 7402 DCA T09 /CLEAR STORED PC
 2313 3301 TAD PNTCNT
 2314 1136 IAC
 2315 7001 DCA PNTCNT
 2316 3136 SKP
 2317 7410

2320	2276	AFRM9,	FRM9				
2321	7410	SKP					
2322	7711	M67,	-67				
/JMS TEST 11 COUNTER =70							
2323	4330	FRM10,	JMS T010				
2324	7402	HLT					
2325	7402	HLT					
2326	7402	HLT					
2327	7402	HLT					
/CHECK COUNTER WRONG							
/JMP COUNTER WRONG							
/CHECK STORED ADDRESS							
/JMS FAILED							
/CLEAR STORED PC							
2330	5330	T010,	JMP				
2331	1136		TAD PNTCNT				
2332	1351		TAD M70				
2333	7440		SEA				
2334	7402		HLT				
2335	1330		TAD T010				
2336	7041		CIA				
2337	1347		TAD AFRM10				
2340	7440		SEA				
2341	7402		HLT				
2342	3330		DCA T010				
2343	1136		TAD PNTCNT				
2344	7001		IAC				
2345	3136		DCA PNTCNT				
2346	7410		SKP				
2347	2324	AFRM10,	FRM10				
2350	7410	SKP					
2351	7710	M70,	-70				
/JMS TEST 11 COUNTER=71							
2352	4356	FRM11,	JMS T011				
2353	7402	HLT					
2354	7402	HLT					
2355	7402	HLT					
2356	5356	T011,	JMP				
2357	1136		TAD PNTCNT				
2360	1377		TAD M71				
2361	7440		SEA				
2362	7402		HLT				
2363	1356		TAD T011				
2364	7041		CIA				
2365	1375		TAD AFRM11				
2366	7440		SEA				
2367	7402		HLT				
2370	3356		DCA T011				
2371	1136		TAD PNTCNT				
2372	7001		IAC				
2373	3136		DCA PNTCNT				
2374	7410		SKP				
2375	2353	AFRM11,	FRM11				
2376	7410	SKP					
2377	7707	M71,	-71				
/CHECK COUNTER WRONG							
/JMP COUNTER WRONG							
/CHECK STORED ADDRESS							
/JMS FAILED							
/CLEAR STORED PC							

2400 *2400

/JMS TEST 12 COUNTER=72

2400 1205 TAD RK1
 2401 3455 DCA I K7777
 2402 1206 TAD RK2
 2403 3423 DCA I K1
 2404 5423 JMP I K1
 2405 5537 JMP I K2410
 2406 4454 JMS I K7776

*2410

2410 2410 TAD PNTCNT
 2411 1136 TAD M72
 2412 7440 SEA /CHECK COUNTER
 2413 7402 HLT /JMP COUNTER WRONG
 2414 1454 TAD I K7776
 2415 1054 TAD K7776
 2416 7440 SEA /CHECK STORED ADDRESS
 2417 7402 HLT /JMS FAILED
 2420 3454 DCA I K7776 /CLEAR STORED ADDRESS
 2421 1136 TAD PNTCNT
 2422 7001 IAC /ADVANCE COUNTER
 2423 3136 DCA PNTCNT

/JMS TEST 13 COUNTER=73

2424 1231 TAD RK3
 2425 3454 DCA I K7776
 2426 1232 TAD RK4
 2427 3424 DCA I K2
 2430 5424 JMP I K2
 2431 5540 JMP I K2440
 2432 4453 JMS I K7775
 2433 7706 -72

*2440

2440 2440 TAD PNTCNT
 2441 1136 TAD M73
 2442 7440 SEA /CHECK COUNTER
 2443 7402 HLT /JMP COUNTER WRONG
 2444 1453 TAD I K7775
 2445 1053 TAD K7775
 2446 7440 SEA /CHECK STORED ADDRESS
 2447 7402 HLT /JMS FAILED
 2450 3453 DCA I K7775 /CLEAR STORED ADDRESS
 2451 1136 TAD PNTCNT
 2452 7001 IAC /ADVANCE COUNTER
 2453 3136 DCA PNTCNT

/JMS TEST 14 COUNTER=74

2454 1261 TAD RK5

2455	3664	DCA I K7774
2456	1262	TAD RK6
2457	3425	DCA I K4
2460	5425	JMP I K4
2461	5541	JMP I K2470
2462	4452	JMS I K7773
2463	7705	-73
2464	7774	K7774, 7774

2470	*2470	TAD PNTCNT	
2471	1136	TAD M74	
2472	1313	SEA	/CHECK COUNTER
2473	7440	HLT	/JMP COUNTER WRONG
2474	7402	TAD I K7773	
2475	1452	TAD K7773	
2476	1092	SEA	/CHECK STORED ADDRESS
2477	7440	HLT	/JMS FAILED
2500	3452	DCA I K7773	/CLEAR STORED ADDRESS
2501	1136	TAD PNTCNT	
2502	7001	IAC	/ADVANCE COUNTER
2503	3136	DCA PNTCNT	

2504	1311	/JMS TEST 15 COUNTER=75	
2505	3714	TAD RK7	
2506	1312	DCA I K7770	
2507	3426	TAD RK8	
2510	5426	DCA I K10	
2511	5542	JMP I K10	
2512	4451	JMP I K2520	
2513	7704	JMS I K7767	
2514	7770	-74	
		K7770, 7770	

2520	*2520	TAD PNTCNT	
2521	1136	TAD M75	
2522	1343	SEA	/CHECK COUNTER
2523	7440	HLT	/JMP COUNTER WRONG
2524	7402	TAD I K7767	
2525	1451	TAD K7767	
2526	1091	SEA	/CHECK STORED ADDRESS
2527	7440	HLT	/JMS FAILED
2530	7402	DCA I K7767	/CLEAR STORED ADDRESS
2531	3451	TAD PNTCNT	
2532	1136	IAC	/ADVANCE COUNTER
2533	7001	DCA PNTCNT	
2533	3136	DCA PNTCNT	

2534	1341	/JMS TEST 16 COUNTER=76	
2535	3744	TAD RK9	
2536	1342	DCA I K7760	
2537	3427	TAD RK10	
2540	5427	DCA I K20	
		JMP I K20	

2541	/BASIC	JMP-JMS TEST	PAL10	V141	11-NOV-70	13117	PAGE 1-27
5543		RK9,	JMP I K2600				
2542		RK10,	JMS I K7757				
2543		M75,	-75				
2544		K7760,	7760				
2600		*2600					
1136		TAD	PNTCNT				
1223		TAD	M76				
7440		SEA			/CHECK COUNTER		
7402		HLT			/JMP COUNTER WRONG		
1450		TAD	I K7757				
1050		TAD	K7757				
7440		SEA			/CHECK STORED ADDRESS		
7402		HLT			/JMS FAILED		
3450		DCA	I K7757		/CLEAR STORED ADDRESS		
1136		TAD	PNTCNT				
7001		IAC			/ADVANCE COUNTER		
3136		DCA	PNTCNT				
1221		/JMS TEST 17	COUNTER#77				
3624		TAD	RK11				
1222		DCA	I K7740				
3430		TAD	RK12				
5430		DCA	I K40				
5544		JMP	I K40				
4447		JMP	I K2630				
4447		JMS	I K7737				
7702		-76					
7740		K7740,	7740				
2630		*2630					
1136		TAD	PNTCNT				
1253		TAD	M77				
7440		SEA			/CHECK COUNTER		
7402		HLT			/JMP COUNTER WRONG		
1447		TAD	I K7737				
1047		TAD	K7737				
7440		SEA			/CHECK STORED ADDRESS		
7402		HLT			/JMS FAILED		
3447		DCA	I K7737		/CLEAR STORED ADDRESS		
1136		TAD	PNTCNT				
7001		IAC			/ADVANCE COUNTER		
3136		DCA	PNTCNT				
1251		/JMS TEST 18	COUNTER=100				
3654		TAD	RK13				
1252		DCA	I K7700				
3431		TAD	RK14				
5431		DCA	I K100				
5545		JMP	I K100				
4446		JMP	I K2660				
7701		RK13,	K7700,				
7700		RK14,	7700				
		M77,	-77				
		K7700,	7700				

2660	*2660	TAD PNTCNT	
2661	1136	TAD M100	
2662	1303	SEA	/CHECK COUNTER
2663	7440	HLT	/JMS COUNTER WRONG
2664	7402	TAD I K7677	
2665	1446	TAD K7677	
2666	1046	SEA	/CHECK STORED ADDRESS
2667	7440	HLT	/JMS FAILED
2670	3446	DCA I K7677	/CLEAR STORED ADDRESS
2671	1136	TAD PNTCNT	
2672	7001	IAC	/ADVANCE COUNTER
2673	1136	DCA PNTCNT	

2674	1301	/JMS TEST 19	COUNTER=101
2675	3704	TAD RK15	
2676	1302	DCA I K7600	
2677	3432	TAD RK16	
2700	9432	DCA I K200	
2701	5546	JMP I K200	
2702	4445	JMP I K2710	
2703	7700	JMS I K7577	
2704	7600	-100	
		K7600,	7600

2710	*2710	TAD PNTCNT	
2711	1136	TAD M101	
2712	1333	SEA	/CHECK COUNTER
2713	7440	HLT	/JMP COUNTER WRONG
2714	7402	TAD I K7577	
2715	1445	TAD K7577	
2716	1045	SEA	/CHECK STORED ADDRESS
2717	7440	HLT	/JMS FAILED
2720	3445	DCA I K7577	/CLEAR STORED ADDRESS
2721	1136	TAD PNTCNT	
2722	7001	IAC	/ADVANCE COUNTER
2723	1136	DCA PNTCNT	

2724	1331	/JMS TEST 20	COUNTER=102
2725	3734	TAD RK17	
2726	1332	DCA I K7400	
2727	3433	TAD RK18	
2730	5433	DCA I K400	
2731	5547	JMP I K400	
2732	4444	JMP I K2740	
2733	7677	JMS I K7377	
2734	7400	-101	
		K7400,	7400

2740	*2740	TAD PNTCNT	
1136			

2741 1363 TAD M102
 2742 7440 /CHECK COUNTER
 2743 7402 /JMP COUNTER WRONG
 2744 1444 HLT
 2745 1044 TAD I K7377
 2746 7440 TAD K7377
 2747 7402 /CHECK STORED ADDRESS
 2750 3444 /JMS FAILED
 2751 1136 /CLEAR STORED ADDRESS
 2752 7001 IAC PNTCNT
 2753 3136 IAC PNTCNT
 DCA PNTCNT

/JMS TEST 21 COUNTER=103

2754 1361 TAD RK19
 2755 3764 DCA I K7000
 2756 1362 TAD RK20
 2757 3434 DCA I K1000
 2760 5434 JMP I K1000
 2761 5550 JMP I K3000
 2762 4443 JMS I K6777
 2763 7676 -102
 2764 7000 K7000,
 *3000

3000 TAD PNTCNT
 3001 1136 TAD M103
 3002 7440 /CHECK COUNTER
 3003 7402 /JMP COUNTER WRONG
 3004 1443 HLT
 3005 1043 TAD I K6777
 3006 7440 TAD K6777
 3007 7402 /CHECK STORED ADDRESS
 3010 3443 /JMS FAILED
 3011 1136 /CLEAR STORED ADDRESS
 3012 7001 IAC PNTCNT
 3013 3136 IAC PNTCNT
 DCA PNTCNT

/JMS TEST 22 COUNTER=104

3014 1221 TAD RK21
 3015 3624 DCA I K6000
 3016 1222 TAD RK22
 3017 3435 DCA I K2000
 3020 5435 JMP I K2000
 3021 5551 JMP I K3030
 3022 4442 JMS I K5777
 3023 7675 -103
 3024 6000 K6000,
 *3030

3030 TAD PNTCNT
 3031 1136 TAD M104
 3032 7440 /CHECK COUNTER
 3033 7402 /JMP COUNTER WRONG
 3034 1442 TAD I K5777

3035 1042 TAD K5777 /CHECK STORED ADDRESS
 3036 7440 SEA /JMS FAILED
 3037 7402 HLT /CLEAR STORED ADDRESS
 3040 3442 DCA I K5777
 3041 1136 TAD PNTCNT
 3042 7001 IAC /ADVANCE COUNTER
 3043 3136 DCA PNTCNT

3044 1251 /JMS TEST 23 COUNTER=105
 3045 3654 TAD RK23
 3046 1252 DCA I K4001
 3047 3437 TAD RK24
 3050 5437 DCA I K3777
 3051 5552 JMP I K3777
 3052 4436 JMP I K3060
 3053 7674 JMS I K4000
 3054 4001 -104
 K4001, 4001

3060 3060 *3060
 3061 1136 TAD PNTCNT
 3062 1303 TAD M105
 3063 7440 SEA /CHECK COUNTER
 3064 7402 HLT /JMP COUNTER WRONG
 3065 1436 TAD I K4000
 3066 1036 TAD K4000
 3067 7440 SEA /CHECK STORED ADDRESS
 3070 7402 HLT /JMS FAILED
 3071 1136 DCA I K4000 /CLEAR STORED ADDRESS
 3072 7001 TAD PNTCNT /ADVANCE COUNTER
 3073 3136 IAC
 DCA PNTCNT

3074 1301 /JMS TEST 24 COUNTER=106
 3075 3704 TAD RK25
 3076 1302 DCA I K2001
 3077 3442 TAD RK26
 3100 5442 DCA I K5777
 3101 5553 JMP I K5777
 3102 4435 JMP I K3110
 3103 7673 JMS I K2000
 3104 2001 -105
 K2001, 2001

3110 3110 *3110
 3111 1333 TAD PNTCNT
 3112 7440 TAD M106
 3113 7402 SEA /CHECK COUNTER
 3114 1435 HLT /JMP COUNTER WRONG
 3115 1035 TAD I K2000
 3116 7440 TAD K2000 /CHECK STORED ADDRESS
 3117 7402 SEA /JMS FAILED
 3120 3435 HLT /CLEAR STORED ADDRESS
 DCA I K2000

3121	1136	TAD PNTCNT	
3122	7001	IAC	/ADVANCE COUNTER
3123	3136	DCA PNTCNT	
3124	1331	/JMS TEST 25	COUNTER=107
3125	3734	TAD RK27	
3126	1332	DCA I K1001	
3127	3443	TAD RK28	
3130	5443	DCA I K6777	
3131	5554	JMP I K6777	
3132	4434	RK27, JMP I K3140	
3133	7672	RK28, JMS I K1000	
3134	1001	M106, -106	
		K1001, 1001	
3140	*3140		
3140	1136	TAD PNTCNT	
3141	1363	TAD M107	
3142	7440	SEA	/CHECK COUNTER WRONG
3143	7402	HLT	/JMP COUNTER WRONG
3144	1434	TAD I K1000	
3145	1034	TAD K1000	
3146	7440	SEA	/CHECK STORED ADDRESS
3147	7402	HLT	/JMS FAILED
3150	3434	DCA I K1000	/CLEAR STORED ADDRESS
3151	1136	TAD PNTCNT	
3152	7001	IAC	/ADVANCE COUNTER
3153	3136	DCA PNTCNT	
3154	1361	/JMS TEST 26	COUNTER=110
3155	3764	TAD RK29	
3156	1362	DCA I K401	
3157	3444	TAD RK30	
3160	5444	DCA I K7377	
3161	5555	JMP I K7377	
3162	4433	JMP I K3200	
3163	7671	JMS I K400	
3164	0401	M107, -107	
		K401, 401	
3200	*3200		
3200	1136	TAD PNTCNT	
3201	1223	TAD M110	
3202	7440	SEA	/CHECK COUNTER
3203	7402	HLT	/JMP COUNTER WRONG
3204	1433	TAD I K400	
3205	1033	TAD K400	
3206	7440	SEA	/CHECK STORED ADDRESS
3207	7402	HLT	/JMS FAILED
3210	3433	DCA I K400	/CLEAR STORED ADDRESS
3211	1136	TAD PNTCNT	
3212	7001	IAC	/ADVANCE COUNTER
3213	3136	DCA PNTCNT	

/JMS TEST 27 COUNTER=111

3214 1221
 3215 3624
 3216 1222
 3217 3445
 3220 5445
 3221 5556
 3222 4432
 3223 7670
 3224 0201

RK31,
 RK32,
 M110,
 K201,

*3230

3230
 3231
 3232
 3233
 3234
 3235
 3236
 3237
 3240
 3241
 3242
 3243

TAD PNTCNT
 TAD M111
 SEA
 HLT
 TAD I K200
 TAD K200
 SEA
 HLT
 DCA I K200
 TAD PNTCNT
 IAC
 DCA PNTCNT

/CHECK COUNTER
 /JMP COUNTER WRONG
 /CHECK STORED ADDRESS
 /JMS FAILED
 /CLEAR STORED ADDRESS
 /ADVANCE COUNTER

/JMS TEST 28 COUNTER =112

3244 1251
 3245 3654
 3246 1252
 3247 3446
 3250 5446
 3251 5557
 3252 4431
 3253 7667
 3254 0101

RK33,
 RK34,
 M111,
 K101,

3260
 3261
 3262
 3263
 3264
 3265
 3266
 3267
 3270
 3271
 3272
 3273

TAD PNTCNT
 TAD M112
 SEA
 HLT
 TAD I K100
 TAD K100
 SEA
 HLT
 DCA I K100
 TAD PNTCNT
 IAC
 DCA PNTCNT

/CHECK COUNTER
 /JMP COUNTER WRONG
 /CHECK STORED ADDRESS
 /JMS FAILED
 /CLEAR STORED ADDRESS
 /ADVANCE COUNTER

/JMS TEST 29 COUNTER=113

3274 1301
 3275 3704
 3276 1302

TAD RK35
 DCA I K41
 TAD RK36

```

3277 3447 DCA I K7737
3300 5447 JMP I K7737
3301 5560 JMP I K3310
3302 4430 RK35,
3303 7666 RK36,
3304 0041 M112,
      41 K41,
      *3310
3310 TAD PNTCNT
3311 1136 TAD M113
3312 1333 SEA
3313 7402 HLT
3314 1430 TAD I K40
3315 1030 TAD K40
3316 7440 SEA
3317 7402 HLT
3320 3430 DCA I K40
3321 1136 TAD PNTCNT
3322 7001 IAC
3323 3136 DCA PNTCNT
      /CHECK COUNTER
      /JMP COUNTER WRONG
      /CHECK STORED ADDRESS
      /JMS FAILED
      /CLEAR STORED ADDRESS
      /ADVANCE COUNTER

```

```

3324 1331 /JMS TEST 30 COUNTER=114
3325 3734 TAD RK37
3326 1332 DCA I K21
3327 3450 TAD RK38
3330 5450 DCA I K7757
3331 5561 JMP I K7757
3332 4427 JMP I K3340
3333 7665 JMS I K20
3334 0021 -113
      21

```

```

3340 1136 *3340
3341 1363 TAD PNTCNT
3342 7440 TAD M114
3343 7402 SEA
3344 1427 HLT
3345 1027 TAD I K20
3346 7440 TAD K20
3347 7402 SEA
3350 3427 HLT
3351 1136 DCA I K20
3352 7001 TAD PNTCNT
3353 3136 IAC
      DCA PNTCNT
      /CHECK COUNTER
      /JMP COUNTER WRONG
      /CHECK STORED ADDRESS
      /JMS FAILED
      /CLEAR STORED ADDRESS
      /ADVANCE COUNTER

```

```

3354 1361 /JMS TEST 31 COUNTER=115
3355 3764 TAD RK39
3356 1362 DCA I K11
3357 3451 TAD RK40
3360 5451 DCA I K7767
3361 5562 JMP I K7767
3362 5562 JMP I K3400

```

```

3362 4426 RK40, JMS I K10
3363 7664 M114, -114
3364 0011 K11, 11
      3400 *3400
3400 1136 TAD PNTCNT
3401 1223 TAD M115
3402 7440 SEA
3403 7402 HLT
3404 1426 TAD I K10
3405 1026 TAD K10
3406 7440 SEA
3407 7402 HLT
3408 7402 DCA I K10
3409 3426 TAD PNTCNT
3410 1136 IAC
3411 7001 DCA PNTCNT
3412 3136
3413

```

/CHECK COUNTER
/JMP COUNTER WRONG

/CHECK STORED ADDRESS
/JMS FAILED
/CLEAR STORED ADDRESS
/ADVANCE COUNTER

/JMS TEST 32 COUNTER=116

```

3414 1221 TAD RK41
3415 3624 DCA I K5
3416 1222 TAD RK42
3417 3452 DCA I K7773
3420 3452 JMP I K7773
3421 5563 JMP I K3430
3422 4425 RK41,
3423 7663 RK42,
3424 0005 M115,
      5

```

RK41,
RK42,
M115,
K5,

```

3430 3430 *3430
3430 1136 TAD PNTCNT
3431 1253 TAD M116
3432 7440 SEA
3433 7402 HLT
3434 1425 TAD I K4
3435 1025 TAD K4
3436 7440 SEA
3437 7402 HLT
3440 3425 DCA I K4
3441 1136 TAD PNTCNT
3442 7001 IAC
3443 3136 DCA PNTCNT

```

/CHECK COUNTER
/JMP COUNTER WRONG

/CHECK STORED ADDRESS
/JMS FAILED
/CLEAR STORED ADDRESS
/ADVANCE COUNTER

/JMS TEST 33 COUNTER=117

```

3444 1251 TAD RK43
3445 3654 DCA I K3
3446 1252 TAD RK44
3447 3453 DCA I K7775
3450 3453 JMP I K7775
3451 5564 JMP I K3460
3452 4424 RK43,
3453 7662 RK44,
3454 0003 M116,
      3

```

RK43,
RK44,
M116,
K3,

*3460
 3460 TAD PNTCNT
 1136 TAD M117
 3461 /CHECK COUNTER
 1303 /JMP COUNTER WRONG
 3462 /CHECK STORED ADDRESS
 7440 /JMS FAILED
 3463 /CLEAR STORED ADDRESS
 7402 /ADVANCE COUNTER
 3464 TAD I K2
 1424 TAD K2
 3465 /CHECK STORED ADDRESS
 1024 /JMS FAILED
 3466 /CLEAR STORED ADDRESS
 7440 /ADVANCE COUNTER
 3467 TAD I K2
 7402 TAD PNTCNT
 3470 DCA I K2
 3424 IAC PNTCNT
 1136 DCA PNTCNT
 3471 /JMS TEST 34 COUNTER=120
 7001 TAD RK45
 3472 TAD I K2
 3136 TAD RK46
 1301 DCA I K2
 3474 TAD RK46
 3424 DCA I K7776
 3475 TAD RK46
 1302 DCA I K7776
 3476 TAD I K7776
 3477 JMP I K3510
 3454 JMP I K1
 3500 -117
 3501 RK45,
 3502 RK46,
 7661 M117,

*3510
 3510 TAD PNTCNT
 1136 TAD M120
 3511 /CHECK COUNTER
 1333 /JMP COUNTER WRONG
 3512 /CHECK STORED ADDRESS
 7440 /JMS FAILED
 3513 /CLEAR STORED ADDRESS
 7402 /ADVANCE COUNTER
 3514 TAD I K1
 1423 TAD K1
 3515 /CHECK STORED ADDRESS
 1023 /JMS FAILED
 3516 /CLEAR STORED ADDRESS
 7440 /ADVANCE COUNTER
 3517 TAD I K1
 7402 TAD PNTCNT
 3520 DCA I K1
 3423 IAC PNTCNT
 3521 DCA PNTCNT
 1136 /JMS TEST 35 COUNTER=121
 3522 TAD RK47
 7001 DCA I K1
 3136 TAD RK48
 1331 DCA I K7777
 3524 JMP I K7777
 3331 JMP I K3540
 3423 RK47,
 1332 RK48,
 3455 M120,
 3455 *3540
 3530 TAD PNTCNT
 3531 TAD M121
 3532 /CHECK COUNTER
 7660 /JMP COUNTER WRONG
 3540 3540
 1136 1136
 3541 1370
 3542 7440
 3543 7402

*3540
 3540 TAD PNTCNT
 1136 TAD M121
 3541 /CHECK COUNTER
 1370 /JMP COUNTER WRONG
 3542 /CHECK STORED ADDRESS
 7440 /JMS FAILED
 3543 /CLEAR STORED ADDRESS
 7402 /ADVANCE COUNTER

3544	1422	TAD I K0	
3545	1022	TAD K0	
3546	7440	SEA	/CHECK STORED ADDRESS
3547	7402	HLT	/JMS FAILED
3550	3422	DCA I K0	/CLEAR STORED ADDRESS
3551	1371	TAD BLCNT	
3552	7001	IAC	
3553	3371	DCA BLCNT	
3554	1371	TAD BLCNT	
3555	1372	TAD LIMIT	
3556	7640	SEA CLA	
3557	5766	JMP I BEL-1	
3560	3371	DCA BLCNT	
3561	1367	TAD BEL	
3562	6046	TLS	
3563	6041	TSF	
3564	5363	JMP I -1	
3565	5766	JMP I .+1	
3566	4200	4200	
3567	0207	207	BEL,
3570	7657	-121	M121,
3571	0000	0	BLCNT,
3572	1200	-6600	LIMIT,

\$

4000
4100
4200 11111111 11111111 11111111 11111111 11111111 11111111 11111111
4300 11111111 11111111 11111111 11111111 11111111 11111111 11111111
4400 11111111 11111111 11111111 11111111 11111111 11111111 11111111
4500 11111111 11111111 11111111 11111111 11111111 11111111 11111111
4600 11111110 00000000 11111111 11111110 11111111 11111111 11111110
4700 11111111 11111110 11111111 11111110 11111111 11111111 11111110
5000 11111111 11111110 11111111 11111110 11111111 11111111 11111110
5100 11111111 11111110 11111111 11111110 11111111 11111111 11111110
5200 11111111 11111110 11111111 11111110 11111111 11111111 11111110
5300 11111111 11111110 11111111 11111110 11111111 11111111 11111110
5400 11111111 11111110 11111111 11111110 11111111 11111111 00000000
5500 00000000 00000000 00000000 00000000 00000000 00000000 00000000
5600
5700
6000
6100
6200
6300
6400
6500
6600
6700
7000
7100
7200
7300
7400
7500
7600
7700

AFM	2024	K2520	0142	K5320	0105	M116	3453
AFRM	5451	K2600	0143	K5340	0106	M117	3503
AFRM1	2050	K2630	0144	K5360	0107	M12	0124
AFRM10	2347	K2660	0145	K5400	0110	M120	3533
AFRM11	2375	K2710	0146	K5420	0111	M121	3570
AFRM2	2073	K2740	0147	K5440	0112	M13	0125
AFRM3	2121	K3	0150	K5451	0672	M14	0126
AFRM4	2147	K3000	0151	K5777	0042	M15	0127
AFRM5	2175	K3030	0152	K60	0740	M16	0130
AFRM7	2247	K3060	0153	K6000	3024	M17	0131
AFRM8	2272	K3110	0154	K6777	0043	M1777	0667
AFRM9	2320	K3140	0155	K70	0737	M2	0114
AT06	2223	K3200	0156	K7000	2764	M20	0132
BEGIN	4200	K3230	0157	K7377	0044	M21	0133
BEL	3567	K3260	0158	K74	0736	M22	0134
BLCNT	3571	K3310	0160	K740	0741	M23	0135
DO	0170	K3340	0161	K7400	2734	M24	4636
FRM	2002	K3400	0162	K7402	0175	M25	4656
FRM1	2026	K3430	0163	K756	0666	M26	4676
FRM10	2324	K3460	0164	K7577	0045	M27	4716
FRM11	2353	K3510	0165	K7600	2704	M3	0115
FRM2	2092	K3540	0166	K7677	0046	M30	4736
FRM3	2077	K3572	0670	K7700	2654	M31	4756
FRM4	2125	K3777	0037	K7737	0047	M32	4776
FRM5	2153	K4	0025	K7740	2624	M33	5016
FRM7	2225	K40	0030	K7757	0050	M34	5036
FRM8	2251	K400	0033	K7760	2544	M35	5056
FRM9	2276	K4000	0036	K7767	0051	M36	5076
HALT1	0631	K4001	3054	K7770	2514	M37	5116
HALT2	0640	K401	3164	K7773	0052	M4	0116
HALT3	0646	K41	3304	K7774	2464	M40	5136
HALT4	0654	K4620	0056	K7775	0053	M41	5156
K0	0022	K4640	0057	K7776	0054	M4177	0671
K00	0742	K4660	0060	K7777	0055	M42	5176
K1	0023	K4700	0061	LIMIT	3572	M43	5216
K10	0026	K4720	0062	M1	0113	M44	5236
K100	0031	K4740	0063	M10	0122	M45	5256
K1000	0034	K4760	0064	M100	2703	M46	5276
K1001	3134	K5	3424	M101	2733	M47	5316
K101	3254	K5000	0065	M102	2763	M5	0117
K11	3364	K5020	0066	M103	3023	M50	5336
K175	0664	K5040	0067	M104	3053	M51	5356
K2	0024	K5060	0070	M105	3103	M52	5376
K20	0027	K5100	0071	M106	3133	M53	5416
K200	0032	K5120	0072	M107	3163	M54	5436
K2000	0035	K5140	0073	M11	0123	M55	5450
K2001	3104	K5160	0074	M110	3223	M56	2022
K201	3224	K5200	0075	M111	3253	M57	2046
K21	3334	K5220	0076	M112	3303	M577	0665
K2410	0137	K5240	0102	M113	3333	M6	0120
K2440	0140	K5260	0103	M114	3363	M60	2075
K2470	0141	K5300	0104	M115	3423	M61	2123

11-NOV-70

V141

FAL10

/BASIC JMP-JMS TEST

M62	2151	PK42	5315	RK39	3361
M63	2177	PK43	5334	RK4	2432
M64	2221	PK44	5335	RK40	3362
M65	2245	PK45	5354	RK41	3421
M66	2274	PK46	5355	RK42	3422
M67	2322	PK47	5374	RK43	3451
M7	0121	PK48	5375	RK44	3452
M70	2351	PK49	5414	RK45	3501
M71	2377	PK5	4654	RK46	3502
M72	2433	PK50	5415	RK47	3531
M73	2463	PK51	5434	RK48	3532
M74	2513	PK52	5435	RK5	2461
M75	2543	PK6	4655	RK6	2462
M76	2623	PK7	4674	RK7	2511
M7600	0673	PK8	4675	RK8	2512
M77	2653	PK9	4714	RK9	2541
PK1	4605	PNTCNT	0136	SAVE	0600
PK10	4715	REFILL	0704	SAVER	0201
PK11	4734	RENEW	0703	STOR	0743
PK12	4735	RESTAR	0700	TO	2003
PK13	4754	RK1	2405	TO1	2027
PK14	4755	RK10	2542	TO10	2330
PK15	4774	RK11	2621	TO11	2356
PK16	4775	RK12	2622	TO2	2054
PK17	5014	RK13	2651	TO3	2102
PK18	5015	RK14	2652	TO4	2130
PK19	5034	RK15	2701	TO5	2156
PK2	4606	RK16	2702	TO6	2202
PK20	5035	RK17	2731	TO7	2226
PK21	5054	RK18	2732	TO8	2253
PK22	5055	RK19	2761	TO9	2301
PK23	5074	RK2	2406		
PK24	5075	RK20	2762		
PK25	5114	RK21	3021		
PK26	5115	RK22	3022		
PK27	5134	RK23	3051		
PK28	5135	RK24	3052		
PK29	5154	RK25	3101		
PK3	4634	RK26	3102		
PK30	5155	RK27	3131		
PK31	5174	RK28	3132		
PK32	5175	RK29	3161		
PK33	5214	RK3	2431		
PK34	5215	RK30	3162		
PK35	5234	RK31	3221		
PK36	5235	RK32	3222		
PK37	5254	RK33	3251		
PK38	5255	RK34	3252		
PK39	5274	RK35	3301		
PK4	4635	RK36	3302		
PK40	5275	RK37	3331		
PK41	5314	RK38	3332		

ERRORS DETECTED: 0
LINKS GENERATED: 0
RUN-TIME: 17 SECONDS
3K CORE USED