

ADVANCE COPY

This document subject to change
without notice.

IDENTIFICATION

PRODUCT CODE: MAINDEC-RE-D0FB-D

PRODUCT NAME: RANDOM ISE TEST

DATE CREATED: DECEMBER 10, 1970

MAINTAINER: DIAGNOSTIC GROUP

AUTHOR: BRUCE HANSEN

1. ABSTRACT

THIS PROGRAM IS WRITTEN TO TEST THE ISZ INSTRUCTION OF THE PDP-8E. AN ISZ INSTRUCTION IS PLACED IN A FROM LOCATION, AND A TO LOCATION CONTAINS THE OPERAND. PART 1 OF THE PROGRAM SELECTS FROM, TO, AND OPERAND FROM A RANDOM NUMBER GENERATOR, WITH THE OPTION OF HOLDING ANY OR ALL CONSTANT. PART 2 USES A FIXED SET OF FROM, TO, AND OPERAND NUMBERS.

2. REQUIREMENTS

2.1 EQUIPMENT

ONE PDP-8E EQUIPPED WITH TELETYPE.

2.2 STORAGE

THIS PROGRAM USES LOCATIONS 0000-7000(8). THE BINARY LOADER MUST BE STORED IN THE LAST MEMORY PAGE.

2.3 PRELIMINARY PROGRAM

MAINDEC-8E-DBAA, AND MAINDEC-8E-DBBA MUST HAVE RUN SUCCESSFULLY.

3. LOADING PROCEDURE

THE STANDARD BINARY LOADER IS USED.

4. STARTING PROCEDURE

4.1 SWITCH SETTINGS

SRA(0) = HALT ON ERROR
 SRI(1) = ELIMINATE ERROR PRINTOUTS
 SR3 = FIXED FROMS (1)
 SRA = RANDOM FROMS (0)
 SRS = FIXED TOG (1)
 SRS = RANDOM TOG (0)
 SRS = FIXED OPERAND (1)
 SRS = RANDOM OPERAND (0)
 SR9(0) = DO ONE ISZ ONLY
 SRI(1) = DO TEST PART 2 SR3, 4, 5, MUST BE 0'S
 SRI(0) = DO TEST PART 1

4.2 STARTING ADDRESS

4.3 OPERATOR ACTION

- A. SET SR (SWITCH REGISTER) TO 0200 AND PRESS LOAD ADDRESS.
- B. SET SR TO DESIRED MODE OF OPERATION; FOR MOST RUNS, SR9=0
ALLOWS THE MOST TESTING IN THE LEAST AMOUNT OF TIME.

FOR FIXED FROM, TO, OR OPERAND USAGE, THE FIXED NUMBER MAY
BE SELECTED AND ENTERED INTO THE MEMORY LOCATIONS SHOWN
BELOW:

FROM =0002
TO =0021
OPERAND =0022

- C. PRESS, CLEAR AND THEN CONTINUE.

5. OPERATING PROCEDURE

SAME AS PARAGRAPH 4.

6. ERRORS

6.1 ERROR HALTS AND DESCRIPTION

C(PC)	CAUSE
0002	PERIPHERAL INTERRUPT
0254	HALT ON ERROR. SR0=0

6.2 ERROR PRINTOUTS

F	XXXX	T	YYYY		MMMM	R	NNNN	NS
0	ZZZZ	F						

6.2.1 PRINTOUT EXPLANATION

(FROM)	F XXXX	-THE ISZ INSTRUCTION IN LOCATION XXXX FAILED.
(TO)	T YYYY	-THE OPERAND ADDRESS OF THE ISZ INSTRUCTION WAS YYYY.
(OPERAND)	0 ZZZZ	-THE STARTING COUNT IN THE ISZ LOOP WAS ZZZZ.
(FAILED)	F MMMM	-THE FAILURE OCCURRED TRYING TO ISZ THE NUMBER MMMM.
(RESULT)	R NNNN	-THE RESULT OF THIS ISZ WAS NNNN.
	NS	-NO SKIP OCCURRED
	S,	-INDICATES A SKIP.

A. THE FOLLOWING IS A TYPICAL ERROR PRINTOUT.

```
F 3003 T 5470
Q 3705 F 4777 R 5020 S
```

LINE 1 OF THE PRINTOUT IS A STATEMENT OF THE PROBLEM. IT SAYS THAT LOCATED AT 3003 IS AN ISZ INSTRUCTION INCREMENTING AN OPERAND STORED IN LOCATION 5470. LINE 2 OF THE PRINTOUT GIVES INFORMATION FOR ERROR ANALYSIS. 3705 WAS THE INITIAL OPERAND, 4777 WAS THE OPERAND BEING INCREMENTED WHEN THE ERROR OCCURRED, AND 5020 IS THE OPERAND FOLLOWING THE FAILING INCREMENT. THE S INDICATES THAT THE INCREMENT RESULTED IN A SKIP. THE ERROR HERE IS OBVIOUSLY THAT THE SKIP SHOULD NOT HAVE OCCURRED.

B. THE FOLLOWING IS ANOTHER TYPICAL ERROR PRINTOUT.

```
F 3003 T 5470
Q 3705 F 4777 R 5020 NS
```

THIS IS IDENTICAL TO EXAMPLE (A) EXCEPT THAT A DIFFERENT TYPE OF ERROR HAS OCCURRED. THE RESULT OF INCREMENTING 4777 SHOULD BE 5000, NOT 5020.

6.3 ERROR RECOVERY

```
-----
```

THE PROGRAM CONTINUES ON, FOLLOWING AN ERROR PRINTOUT UNLESS SR0=0. AFTER A HALT ON ERROR, PUSH CONTINUE TO RESUME TESTING. WHEN ERRORS EXIST, A FAILING CONDITION CHOSEN FROM THOSE TYPED OUT MUST BE USED WITH THE SCOPE MODE. FOR THE SCOPE MODE, PERFORM THE FOLLOWING STEPS:

- A. STOP THE PROGRAM.
- B. INSERT CHOSEN FROM INTO LOCATION 0002.
- C. INSERT CHOSEN TO INTO LOCATION 0021.
- D. INSERT CHOSEN FAILING OPERAND INTO LOCATION 0022
- E. RESTART PROGRAM WITH CONTROL SWITCHES 1,3,4,5, SET TO 1 AND 9 SET TO A 0.

NOTE! BY SETTING SR0 TO A 0, THE PROGRAM HALTS FOLLOWING THE ERROR PRINTOUT. THE OPERATOR MAY AT THIS TIME SET SWITCHES 1, 3, 4, 5, TO A 1 AND 9 TO A 0 AND PUSH CONTINUE. THE PROGRAM ENTERS A SCOPE MODE USING THE FAILING CONDITIONS JUST PRINTED.

7. RESTRICTIONS

7.1 STARTING RESTRICTIONS

NONE.

7.2 OPERATING RESTRICTIONS

THE INTERRUPT IS ENABLED DURING PROGRAM OPERATION. ANY ATTACHED
DEVICE WHICH MIGHT CAUSE SPURIOUS INTERRUPTS, MUST BE DISABLED.


8. MISCELLANEOUS

8.1 EXECUTION TIME

SR9 = 1. 11,000 ISE OPERATIONS/SECOND.
SR9 = 0. 3,500 ISE OPERATIONS/SECOND.

9. PROGRAM DESCRIPTION

THE TEST LOOP IS SHOWN BELOW:

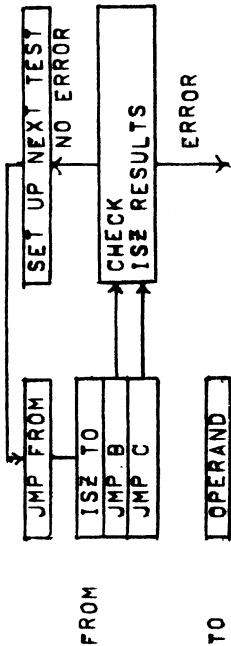

PART 1 OF THE PROGRAM USES A RANDOM NUMBER GENERATOR TO SELECT THE FROM, TO, AND OPERAND NUMBERS. ONCE SELECTED, THE OPERAND IS INCREMENTED UNTIL IT REACHES ZERO. EACH ISZ IS CHECKED BY DUPLICATING ISZ WITH TAD, IAC, DCA. EACH ITERATION IS ALSO CHECKED FOR THE PROPER SKIP OR NO-SKIP CONDITION.

PART 2 OF THE PROGRAM IS ACTUALLY PART 1, WITH THE RANDOM NUMBER GENERATED REPLACED BY A FIXED NUMBER GENERATOR. SEQUENCING OF EVENTS IS AS FOLLOWS:

(NOTE: 621(8)<MEMORY TEST AREA<7600(8)):

A. FROM = 621 TO = 624 TEST A SET OF 24 SELECTED OPERANDS. TO SAVE TIME IT IS SUGGESTED THAT SR9 = 0, SO THAT THE ISZ IS PERFORMED ON EACH OPERAND ONLY ONCE INSTEAD OF INCREMENTING IT UNTIL THE ISZ INSTRUCTION SKIPS.

B. FROM = 621 TO = 625 REPEAT THE SET OF OPERANDS USED IN (A) ABOVE.

THIS SEQUENCE CONTINUES UNTIL TO REACHES THE UPPER LIMIT OF THE MEMORY TEST AREA. FROM IS THEN INCREMENTED BY 1 AND THE PROCESS IS REPEATED. WHEN FROM REACHES THE UPPER LIMIT OF THE MEMORY TEST AREA, THE TEST IS COMPLETE.

IDEALLY, IT IS DESIRABLE TO ISZ EVERY LOCATION FROM EVERY OTHER LOCATION IN THE TEST AREA AND, IN DOING SO, USE ALL 24 OF THE SELECTED WORST CASE OPERANDS FOR EACH SET OF ADDRESSES. THIS IS WHAT PART 2 DOES, BUT IT TAKES MANY DAYS TO COMPLETE THE TEST. IT IS FOR THIS REASON THAT THE PROGRAM USES THE RANDOM NUMBER GENERATOR SYSTEM OF PART 1. PART 2 IS AN ADDITIONAL FEATURE OF THE PROGRAM WITH VERY LIMITED USE.

A FB IS PRINTED AFTER EACH GROUP OF 32,000 TESTS.

```

0000      0000      /CONSTANTS AND VARIABLES
0001      5001      *0
0002      0002      /PERIPHERAL INTERRUPT
0003      0003      /ISZ TEST INSTRUCTION LOCATION
0004      0004      /LOW LIMIT TEST AREA
0005      0005
0006      0202      /HIGH LIMIT TEST AREA
0007      0547      /OCTAL CONVERSION MASK
0010      0007      /IR0
0011      0000      /IR1
0012      0000
0013      7401      /THE RANDOM NUMBER LOCATION
0014      3607      NUM, 3607
0015      0003      THREE, 3
0016      2421      ISZ I TOLOC
0017      5116      JMP BACK
0020      5141      JMP BAKBRN
0021      0000      /MOVING ISZ
0022      0000      /TEST INSTRUCTION
0023      0000      /GROUP,
0024      0000      /LOCATION TO BE ISZ'D
0025      0004      /STARTING ISZ PATTERN
0026      0400      /FAILING PATTERN BEFORE FAILING ISZ
0027      0200      /PREDICTED RESULTS OF EACH ISZ
0030      0100      /SWITCH REGISTER MASKS
0031      0000      /7'S=ERROR WITH NO SKIP
0032      0257      /0'S=ERROR WITH SKIP
0033      0201      PRINT, INF1-1
0034      0206      AERR1, ERR1
0035      0413      AERR2, ERR2
0036      1014      APDR, PDR
0037      0600      ITADNM, TAD NUM
          ATFCLF, TFCLF
          /SR0(0)=HALT AFTER ERROR PRINTOUT
          /SR1(1)=NO PRINTOUTS
          /SR3(1) = HOLD FROM CONSTANT
          /SR4(1) = HOLD TO CONSTANT
          /SR5(1) = HOLD PATTERN CONSTANT
          /SR9(0) = DO ONE ISZ ONLY
          /SR11(1) = DO TEST PART 2
          /
          /PROGRAM START
          START, JMS I .+1
          PATCH AND THREE
          /ION
          /LAS

```

ADVANCE COPY
This document subject to change
without notice.

SKIP IF PAF
/GO TO PART 2

0043 7640
0044 9426
0045 1036
0046 3165
0047 7604
0050 0030
0051 7440
0052 5055

32A CLA
JMP I K0400
TAD ITADNM
DCA RANUM+1
/CHECK FOR FIXED PATTERN
LAS
AND K0100
32A
JMP CHEK2

/SELECT THE PATTERN
JMS RANUM
DCA PATRN

0053 4164
0054 3022

/CHECK FOR FIXED TO
LAS
AND K0200
32A CLA
JMP CHEK3

0055 7604
0056 0027
0057 7640
0060 5065

/SELECT THE TO LOCATION
JMS RANUM
DCA TOLOC
TAD TOLOC
JMS LIMITST

0061 4164
0062 3021
0063 1021
0064 4151

/CHECK FOR FIXED FROM
LAS
AND K0400
32A CLA
JMP PLCINT

0065 7604
0066 0026
0067 7640
0070 5075

/SELECT THE FROM LOCATION
JMS RANUM
DCA FRMLC
TAD FRMLC
JMS LIMITST

0071 4164
0072 3002
0073 1002
0074 4151

/PLACE FROM INSTRUCTIONS

PLCINT, CLA CMA
TAD FRMLC
DCA WORK
TAD ISZ1
DCA I WORK
TAD JMP1
DCA I WORK
TAD JMP2
DCA I WORK

0075 7240
0076 1002
0077 3011
0100 1016
0101 3411
0102 1017
0103 3411
0104 1020
0105 3411

/DEPOSIT PATTERN IN TO LOCATION
TAD PATRN
DCA I TOLOC

0106 1022
0107 3421

0110 1022
 0111 3023
 0112 1023
 0113 7001
 0114 3024
 0115 5407

LUP1,

/STORE PREDICTED ISZ RESULT

TAD PATRN
 DCA BEFOR
 TAD BEFOR
 IAC
 DCA AFTER
 JMP I ASUC

0116 7604
 0117 7004
 0120 7710
 0121 9132
 0122 1421
 0123 7041
 0124 1024
 0125 7640
 0126 9433
 0127 1421
 0130 7650
 0131 9433
 0132 7604
 0133 0025
 0134 7650
 0135 9047
 0136 7001
 0137 1023
 0140 9111

BACK,

/RETURN FOR NO SKIP CONDITION

LAS
 RAL
 SPA CLA
 JMP LAS1
 TAD I TOLOC
 CIA
 TAD AFTER
 SEA CLA
 JMP I AERR1
 TAD I TOLOC
 SNA CLA
 JMP I AERR1
 LAS
 AND K4
 SNA CLA
 JMP CHEK1
 IAC
 TAD BEFOR
 JMP LUP1-1

LAS1,

/ERROR IN ISZ OPERATION
 /ERROR IN ISZ SKIP DETECTION
 /SKIP IF NOT ONE ISZ (SR0)

0141 7604
 0142 7004
 0143 7710
 0144 9047
 0145 1421
 0146 7640
 0147 9434
 0150 9047

BAKBRN,

/RETURN FOR SKIP CONDITION

LAS
 RAL
 SPA CLA
 JMP CHEK1
 TAD I TOLOC
 SEA CLA
 JMP I AERR2
 JMP CHEK1

/SKIP IF TO LOCATION OK
 /ERROR IN ISZ LOCATION

0151 0000
 0152 7510
 0153 9160
 0154 1003
 0155 7700
 0156 9551
 0157 9165
 0160 1006
 0161 7700
 0162 9165
 0163 9551

LIMITST, 0

/TEST HIGH-LOW LIMITS

SPA
 JMP .+5
 TAD LIMLO
 SMA CLA
 JMP I LIMITST
 JMP RANUM+1
 TAD LIMHI
 SMA CLA
 JMP RANUM+1
 JMP I LIMITST

```
0164 0000
0165 1014
0166 7104
0167 7430
0170 1015
0171 3014
0172 1014
0173 5564
0174 1000
0175 0000

RANUM,
0
TAD NUM
RAL CLL
SEL
TAD THREE
DCA NUM
TAD NUM
JMP I RANUM
/AC=NEW RANDOM NUMBER

K1000,
KP,
0

*200
0200
0201 1340
0202 3332
0203 7040
0204 3031
0205 0210

JMP START
/ERROR ROUTINE 1
TAD SKPDAT+6
DCA SKPDAT
CMA
DCA NOTE
JMP KPGO

ERR1,
0206 1331
0207 3332
0210 1002
0211 3011
0212 1370
0213 4342

/ERROR ROUTINE 2
TAD SKPDAT-1
DCA SKPDAT
TAD FRMLC
DCA WORK
TAD A3
JMS SETUP

ERR2,
0214 1021
0215 3011
0216 1371
0217 4342

TAD TOLOC
DCA WORK
TAD A4
JMS SETUP

TAD PATRN
DCA WORK
TAD A5
JMS SETUP
TAD BEFOR
DCA WORK
TAD A6
JMS SETUP

TAD I TOLOC
DCA WORK
TAD A7
JMS SETUP

TTY,
0234 6002
0235 1032
0236 3011
0237 1411

/TTY PRINT ROUTINE
IOF
TAD PRINT
DCA WORK
TAD I WORK
```

0240	0046	TLS	
0241	0041	TSP	
0242	0241	JMP	-1
0243	0013	TAD	M377
0244	7640	SZA	CLA
0245	0237	JMP	TTY+3
0246	0042	TCF	
0247	0001	ION	
0250	7604	LAS	
0251	7700	SMA	CLA
0252	7402	HLT	/HALT AFTER ERROR (SR0)
0253	1031	TAD	NOTE
0254	7650	SNA	CLA
0255	0047	JMP	CHEK1
0256	3031	DCA	NOTE
0257	0132	JMP	LAS1

/RETURN TO NO SKIP ROUTINE

0260	0306	INF1,	306	/ERROR PRINT OUT LINE 1	/F	FROM (INSTRUCTION LOCATION)
0261	0240	INDATA,	240		/SPACE	
0262	0000				/X	LOCATION
0263	0000				/X	
0264	0000				/X	
0265	0000				/X	
0266	0240				/SPACE	
0267	0240				/SPACE	
0270	0324				/T	TO (OPERAND ADDRESS)
0271	0240				/SPACE	
0272	0000	ONDATA,	0		/X	ADDRESS
0273	0000				/X	
0274	0000				/X	
0275	0000				/X	
0276	0215				/CR	
0277	0212				/LF	
0300	0215				/CR	
0301	0215				/CR	

0302	0317	STDATA,	317	/ERROR PRINTOUT LINE 2	/O	OPERAND (STARTING COUNT)
0303	0240		240		/SPACE	
0304	0000				/X	PATTERN
0305	0000				/X	
0306	0000				/X	
0307	0000				/X	
0310	0240				/SPACE	
0311	0240				/SPACE	
0312	0306				/F	FAILING COUNT
0313	0240				/SPACE	
0314	0000	FLDATA,	0		/X	PATTERN BEFORE FAILING ISZ
0315	0000				/X	
0316	0000				/X	
0317	0000				/X	
0320	0240				/SPACE	

0321 0240
0322 0322
0323 0240
0324 0000
0325 0000
0326 0000
0327 0000
0330 0240
0331 0240
0332 0316
0333 0323
0334 0215
0335 0212
0336 0212
0337 0377
0340 0316
0341 0323
0342 0000
0343 3012
0344 1011
0345 7006
0346 7006
0347 4362
0350 7012
0351 7012
0352 7012
0353 4362
0354 7012
0355 7010
0356 4362
0357 4362
0360 7200
0361 5742
0362 0000
0363 0010
0364 1375
0365 3412
0366 1011
0367 9762
0370 0261
0371 0271
0372 0303
0373 0313
0374 0323
0375 0260
0400 0400
1003 1003

PATTERN AFTER FAILING ISE

RSDATA, 0
0
0
0
240
240
SKPDAT, 316
323
215
212
212
377
316
323
0
DCA WORK1
TAD WORK
RTL
RTL
JMS MORSU
RTR
RTR
RTR
JMS MORSU
RTR
RAR
JMS MORSU
JMS MORSU
CLA
JMP I SETUP
0
AND MSK7
TAD TW6
DCA I WORK1
TAD WORK
JMP I MORSU
/PAGE 1 CONSTANTS
INDATA-1
ONDATA-1
STDATA-1
FLDATA-1
RSDATA-1
0260
A3,
A4,
A5,
A6,
A7,
TW6,
/PART 2 INITIALIZATION ROUTINE
*400
TAD LIMLO

/X
/X
/X
/X
/SPACE
/SPACE
/N
/S
/CR
/LF
/RUBOUT
/N
/S
NO
SKIP

RESULT AFTER FAILURE
/SPACE
/R
/SPACE

0401	7041	CIA	FROM	
0402	3310	DCA	FROM	/LOW LIMIT TO FROM
0403	1003	TAD	LIMLO	
0404	7040	CMA	TO	
0405	3311	DCA	TO	
0406	1346	TAD	A0	
0407	3313	DCA	PATCYC	
0410	1314	TAD	INST1	
0411	3165	DCA	RANUM+1	
0412	5047	JMP	CHEK1	/GO TO PAGE 0 START

0413	1164	/PATH DECISION ROUTINE		
0414	7041	TAD	RANUM	
0415	1305	CIA		
0416	7650	TAD	GFROM	
0417	5303	SNA	CLA	/SKIP IF NOT REQUESTING FROM
0420	1164	JMP	FRUT	/GO TO FROM ADDRESS ROUTINE
0421	7041	TAD	RANUM	
0422	1306	CIA		
0423	7650	TAD	GTO	
0424	5301	SNA	CLA	/SKIP IF NOT REQUESTING TO
0425	5226	JMP	TORUT	/GO TO TO ADDRESS ROUTINE
		JMP	PRUT	/GO TO PATTERN ROUTINE

0426	1713	/SELECT PATTERN AND OTHER THINGS		
0427	3312	TAD	I PATCYC	
0430	1312	DCA	PATT	
0431	7450	TAD	PATT	
0432	5240	SNA		/NO SKIP IF END OF PATTERN TABLE
0433	7201	JMP	.+6	/END PATTERN TABLE LOOK AROUND
0434	1313	CLA	IAC	
0435	3313	TAD	PATCYC	
0436	1312	DCA	PATCYC	
0437	5564	TAD	PATT	
		JMP	I RANUM	/RETURN, AC=NEW PATTERN
0440	1345	TAD	AK7776	
0441	3313	DCA	PATCYC	/RESTOR START ADDRESS OF PATT. TABLE
0442	7001	IAC		
0443	1311	TAD	TO	/INCREMENT TO
0444	3311	DCA	TO	
0445	1311	TAD	TO	
0446	7041	CIA		
0447	1310	TAD	FROM	
0450	7640	SEA	CLA	/SKIP IF TO = FROM
0451	5255	JMP	.+4	
0452	1311	TAD	TO	
0453	1015	TAD	THREE	
0454	3311	DCA	TO	/SKIP AROUND FROM
0455	1311	TAD	TO	
0456	7500	SMA		
0457	5276	JMP	GOUT	

0460	1006	TAD LIMHI	
0461	7710	SPA CLA	/SKIP IF END TEST AREA
0462	5276	JMP GOUT	
0463	7201	CLA IAC	
0464	1310	TAD FROM	/ADVANCE FROM
0465	1310	DCA FROM	
0466	1003	TAD LIMLO	
0467	7041	CIA TO	/RESET TO ADDRESS
0470	3311	DCA TO	
0471	1310	TAD FROM	
0472	1006	TAD LIMHI	
0473	7710	SPA CLA	
0474	5276	JMP GOUT	
0475	5200	JMP 400	
0476	7200	CLA	
0477	1312	TAD PATT	
0500	5564	JMP I RANUM	
GOUT,			
/SELECT TO ROUTINE			
0501	1311	TAD TO	
0502	5564	JMP I RANUM	
/SELECT FROM ROUTINE			
0503	1310	TAD FROM	
0504	5564	JMP I RANUM	
/PAGE 3 CONSTANTS			
0505	0072	SELFRM+1	/STORED RETURN ADDRESS WHEN
0506	0062	SELTO+1	/RANDOM FROM IS REQUESTED
0507	0054	SELPAT+1	/STORED RETURN ADDRESS WHEN
0510	0000	FROM,	/RANDOM TO IS REQUESTED
0511	0000	TO,	/RANDOM FROM IS REQUESTED
0512	0000	PATT,	/STORED RETURN ADDRESS WHEN
0513	0000	PATCYC,	/RANDOM TO IS REQUESTED
0514	5435	INST1,	/STORED RETURN ADDRESS WHEN
0515	7776	K7776,	/RANDOM PATTERN IS REQUESTED
0516	7775		/CURRENT FROM ADDRESS
0517	7773		/CURRENT TO ADDRESS
0520	7767		/CURRENT PATTERN
0521	7757		/CURRENT PATTERN ADDRESS
0522	7737		
0523	7677		
0524	7577		
0525	7377		
0526	6777		
0527	5777		
0530	3777		
0531	0001		
0532	0003		
0533	0007		
0534	0017		
JMP I APDR			
7776			
7775			
7773			
7767			
7757			
7737			
7677			
7577			
7377			
6777			
5777			
3777			
0001			
0003			
0007			
0017			

0535	0037	0037	
0536	0077	0077	
0537	0177	0177	
0540	0377	0377	
0541	0777	0777	
0542	1777	1777	
0543	3777	3777	
0544	0000	0	
0545	0515	AK7776, K7776	
0546	0544	A0, K3777+1	

0547	1375	SUC,	TAD CT
0550	7001		IAC
0551	3375		DCA CT
0552	1375		TAD CT
0553	7640		SEA CLA
0554	5437		JMP I ATFCLF
0555	1175		TAD KP
0556	1174		TAD K1000
0557	3175		DCA KP
0560	1175		TAD KP
0561	7640		SEA CLA
0562	0437		JMP I ATFCLF
0563	0002		IOF
0564	1376		TAD INF2
0565	3011		DCA WORK
0566	5767		JMP I .+1
0567	7602		7602
0570	0215		215
0571	0212		212
0572	0306		306
0573	0302		302
0574	0377		377
0575	0000		0
0576	0567		567

CT,
INF2,

*600
/CHECK FOR TO=FROM CONFLICT

0600	1021	TFCLF,	TAD TOLOC
0601	7041		CIA
0602	1002		TAD FRMLC
0603	7450		SNA
0604	5055		JMP CHEK2
0605	7001		IAC
0606	7450		SNA
0607	5055		JMP CHEK2
0610	7001		IAC
0611	7650		SNA CLA
0612	5055		JMP CHEK2

0613 3402

**0614
0615
0616
0617
0620
0621
0622
0623
0624
0625
0626
0627
0630
0631**

PATCH.

JMP I FRMLU

/RESTORE THEN GO AWAY

```
0 DCA TAD DCA TAD DCA TAD DCA TAD DCA TAD ION JMP
```

0632	7402	X,
0633	0000	X1,
0634	7157	X2,
0635	0001	X3,
0636	7604	X4,

X,
X1,
X2,
X3,
X4,

7402
07157
ION
LAS

7602

7602
1411
0046
6041
5204
1013
7640
5202
5217

TAD I WORK

T L S
 T S F
 J M P
 T A D
 S E A
 J M P
 J M P

7617
OVR,

7617	6042	6001	5437
7617	7620	7621	

TCF
ION
JMP I ATFCLF

5

[illegible]

1000	1100	1200	1300	1400	1500	1600	1700	2000	2100	2200	2300	2400	2500	2600	2700	3000	3100	3200	3300	3400	3500	3600	3700
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

4000
4100
4200
4300
4400
4500
4600
4700

5000
5100
5200
5300
5400
5500
5600
5700

6000
6100
6200
6300
6400
6500
6600
6700

7000
7100
7200
7300
7400
7500

7600 00111111 11000001 11000000 00000000 00000000 00000000 00000000
7700 00000000 00000000 00000000 00000000 00000000 00000000 00000000

A0	0546
A3	0370
A4	0371
A5	0372
A6	0373
A7	0374
AERR1	0033
AERR2	0034
AFTER	0024
AK7776	0545
APOR	0035
ASUC	0007
ATFCLF	0037
BACK	0116
BAKBRN	0141
BEFOR	0023
CHEK1	0047
CHEK2	0055
CHEK3	0065
CT	0575
ERR1	0201
ERR2	0206
FLODATA	0314
FRML0C	0002
FROM	0510
FRUT	0503
GFROM	0505
GOUT	0476
GPAT	0507
GTO	0506
INDATA	0262
INF1	0260
INF2	0576
INST1	0314
ISE1	0016
ITADNM	0036
JMP1	0017
JMP2	0020
K0100	0030
K0200	0027
K0400	0026
K1000	0174
K3777	0543
K4	0025
K7776	0515
KP	0175
KPGO	0210
LAS1	0132
LIMH1	0006
LIML0	0003
LIMTST	0151
LUP1	0112

M377	0013
MORSU	0362
MSK7	0010
NOTE	0031
NUM	0014
ONDATA	0272
OVR	7617
PATCH	0614
PATCYC	0513
PATRN	0032
PATT	0512
PDR	0413
PLCPINT	0075
PPRINT	0032
PRUT	0426
RANUM	0164
RSRDATA	0324
SELFRM	0071
SELPAT	0053
SELTO	0061
SETUP	0342
SKPDAT	0332
START	0040
STDATA	0304
SUC	0547
TFCLF	0600
THREE	0015
TO	0511
TOLOC	0021
TORUT	0501
TTY	0234
TW6	0375
WORK	0011
WORK1	0012
X	0632
X1	0633
X2	0634
X3	0635
X4	0636

ERRORS DETECTED: 0

LINKS GENERATED: 0

RUN-TIME: 5 SECONDS

2K CORE USED

